


# DIGI PLEX EVO

## EVO96 Programming Guide Version 1.03



Includes DGP2-641BL/RB  
Programming Guide

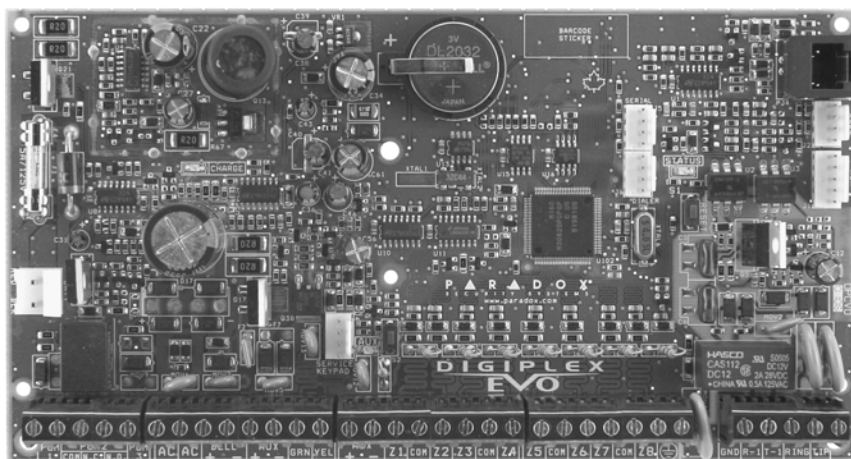

### Default Installer Code

**000000** (To modify the installer code, refer to section [1000], *Installer Code Programming* on page 24)

### Default System Master Code

**1234** or **123456**

### Hardware Reset

To do a hardware reset, press and hold the Reset and Aux button for 3 seconds. (See "PCB Layout" on page 58.)

### How Do I Enter Programming Mode?

- 1) Press and hold the [0] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter 4-digit [SECTION].
- 4) Enter required [DATA].

### Decimal and Hexadecimal Programming Table

Certain sections may require the entry of one or more Hexadecimal values from 0 to F.

#### For LCD keypads:

Key	Value or Action	Key	Value or Action
[0] to [9]	0 to 9 (Hex & Decimal)	[BYP]	E (Hex Only)
[STAY]	A (Hex Only)	[MEM]	F (Hex Only)
[FORCE]	B (Hex Only)	[CLEAR]	Exit section without saving (Hex & Decimal)
[ARM]	C (Hex Only)	[ENTER]	Save current data and advance to next section (Hex Only)
[DISARM]	D (Hex Only)		

#### For Grafica keypads:

[0] to [9]	= values 0 to 9 respectively	Right Action Key (Exit)	= Exit section without saving
[#]	= A to F (press the [#] key until the desired letter appears)	Center Action Key (Save)	= Save current data and advance to next section

# Table of Contents

---

Serial Number List.....	3
Zone Programming.....	9
Zone Report Codes.....	12
Zone Labels.....	14
Keyswitch Programming.....	15
Programmable Outputs.....	17
User Code Options .....	25
Arming and Disarming Report Codes.....	27
Access Control Sections .....	28
Keypad Numbering.....	32
Control Panel Settings .....	32
System Options .....	33
Dialer Options .....	34
Other Options.....	35
Communication Settings .....	36
System Event Call Direction .....	37
Partition Settings .....	38
Special and Trouble Report Codes .....	44
Other Settings and Modes .....	45
Control Panel Hardware Connections .....	51
DGP2-641BL/RB Programming .....	55
Trouble Display.....	61

# Serial Number List

Remove the extra serial number sticker from the module's PC board and affix in the appropriate spaces provided below (maximum 254 modules).

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
1: _____	16: _____	31: _____
2: _____	17: _____	32: _____
3: _____	18: _____	33: _____
4: _____	19: _____	34: _____
5: _____	20: _____	35: _____
6: _____	21: _____	36: _____
7: _____	22: _____	37: _____
8: _____	23: _____	38: _____
9: _____	24: _____	39: _____
10: _____	25: _____	40: _____
11: _____	26: _____	41: _____
12: _____	27: _____	42: _____
13: _____	28: _____	43: _____
14: _____	29: _____	44: _____
15: _____	30: _____	45: _____

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
46: _____	62: _____	78: _____
47: _____	63: _____	79: _____
48: _____	64: _____	80: _____
49: _____	65: _____	81: _____
50: _____	66: _____	82: _____
51: _____	67: _____	83: _____
52: _____	68: _____	84: _____
53: _____	69: _____	85: _____
54: _____	70: _____	86: _____
55: _____	71: _____	87: _____
56: _____	72: _____	88: _____
57: _____	73: _____	89: _____
58: _____	74: _____	90: _____
59: _____	75: _____	91: _____
60: _____	76: _____	92: _____
61: _____	77: _____	93: _____

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
--------------------------------------	--------------------------------------	--------------------------------------

94:_____	110:_____	126:_____
95:_____	111:_____	127:_____
96:_____	112:_____	128:_____
97:_____	113:_____	129:_____
98:_____	114:_____	130:_____
99:_____	115:_____	131:_____
100:_____	116:_____	132:_____
101:_____	117:_____	133:_____
102:_____	118:_____	134:_____
103:_____	119:_____	135:_____
104:_____	120:_____	136:_____
105:_____	121:_____	137:_____
106:_____	122:_____	138:_____
107:_____	123:_____	139:_____
108:_____	124:_____	140:_____
109:_____	125:_____	141:_____

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
--------------------------------------	--------------------------------------	--------------------------------------

142:\_\_\_\_\_ 158:\_\_\_\_\_ 174:\_\_\_\_\_

143:\_\_\_\_\_ 159:\_\_\_\_\_ 175:\_\_\_\_\_

144:\_\_\_\_\_ 160:\_\_\_\_\_ 176:\_\_\_\_\_

145:\_\_\_\_\_ 161:\_\_\_\_\_ 177:\_\_\_\_\_

146:\_\_\_\_\_ 162:\_\_\_\_\_ 178:\_\_\_\_\_

147:\_\_\_\_\_ 163:\_\_\_\_\_ 179:\_\_\_\_\_

148:\_\_\_\_\_ 164:\_\_\_\_\_ 180:\_\_\_\_\_

149:\_\_\_\_\_ 165:\_\_\_\_\_ 181:\_\_\_\_\_

150:\_\_\_\_\_ 166:\_\_\_\_\_ 182:\_\_\_\_\_

151:\_\_\_\_\_ 167:\_\_\_\_\_ 183:\_\_\_\_\_

152:\_\_\_\_\_ 168:\_\_\_\_\_ 184:\_\_\_\_\_

153:\_\_\_\_\_ 169:\_\_\_\_\_ 185:\_\_\_\_\_

154:\_\_\_\_\_ 170:\_\_\_\_\_ 186:\_\_\_\_\_

155:\_\_\_\_\_ 171:\_\_\_\_\_ 187:\_\_\_\_\_

156:\_\_\_\_\_ 172:\_\_\_\_\_ 188:\_\_\_\_\_

157:\_\_\_\_\_ 173:\_\_\_\_\_ 189:\_\_\_\_\_

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
--------------------------------------	--------------------------------------	--------------------------------------

190:_____	206:_____	222:_____
191:_____	207:_____	223:_____
192:_____	208:_____	224:_____
193:_____	209:_____	225:_____
194:_____	210:_____	226:_____
195:_____	211:_____	227:_____
196:_____	212:_____	228:_____
197:_____	213:_____	229:_____
198:_____	214:_____	230:_____
199:_____	215:_____	231:_____
200:_____	216:_____	232:_____
201:_____	217:_____	233:_____
202:_____	218:_____	234:_____
203:_____	219:_____	235:_____
204:_____	220:_____	236:_____
205:_____	221:_____	237:_____

Module Type, Serial Number & Details	Module Type, Serial Number & Details	Module Type, Serial Number & Details
--------------------------------------	--------------------------------------	--------------------------------------

238:\_\_\_\_\_

244:\_\_\_\_\_

250:\_\_\_\_\_

239:\_\_\_\_\_

245:\_\_\_\_\_

251:\_\_\_\_\_

240:\_\_\_\_\_

246:\_\_\_\_\_

252:\_\_\_\_\_

241:\_\_\_\_\_

247:\_\_\_\_\_

253:\_\_\_\_\_

242:\_\_\_\_\_

248:\_\_\_\_\_


254:\_\_\_\_\_

243:\_\_\_\_\_

249:\_\_\_\_\_



# Zone Programming

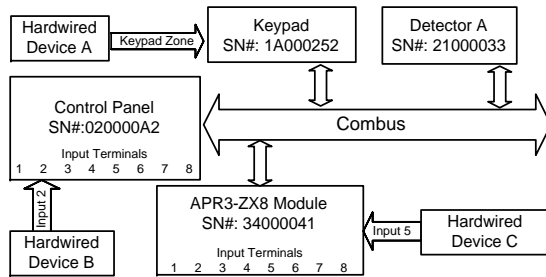

	Zone#	Section#	Serial#	Input#
Detector A:	1 =	[0001]	21000033	N/A
Hardwired Device A:	2 =	[0002]	1A000252	N/A
Hardwired Device B:	3 =	[0003]	020000A2	002
Hardwired Device C:	4 =	[0004]	34000041	005

Enter 8-digit [SERIAL NUMBER] of the Module.

When option [1] in section [3030] is enabled for PGM1 to act as a zone input for two-wire smoke detectors, the control panel will recognize PGM1 as input number 255.

## Zone Numbering

Sections [0001] to [0096] represent zones 1 through 96. This feature allows you to assign an addressable or hardwired detection device to the desired zone.

Enter 3-digit [INPUT NUMBER] of the Module to which the hardwired detection device is connected.

**NOTE:** An input number is not required for modules with only one zone input, such as keypads.

## Zone Parameters

Sections [0101] to [0196] represent zones 1 through 96. This feature defines the type of zone, its partition assignment and the zone's options.

### Zone Definitions

- 0 - Disabled (default)
- 1 - Entry Delay 1
- 2 - Entry Delay 2
- 3 - Follow
- 4 - Instant
- 5 - 24Hr Buzzer
- 6 - 24Hr Burglary
- 7 - 24Hr Hold-up
- 8 - 24Hr Gas
- 9 - 24Hr Heat
- A - 24Hr Water
- B - 24Hr Freeze
- C - Delayed 24Hr Fire
- D - Standard 24Hr Fire
- E - Stay Delay 1
- F - Stay Delay 2

### Zone Options

- [1] Auto Zone Shutdown Enabled
- [2] Bypass Enabled (default)
- [3] Stay Zone
- [4] Force Zone
- [5] [6] Zone Alarm Type
  - off off Steady Alarm
  - off on Pulsed Alarm
  - on off Silent Alarm
  - on on Report Only
- [7] Intellizone
- [8] Delay before Transmission

### Zone Partition Assignment

- 1 - Assigned to Partition 1 (default)
- 2 - Assigned to Partition 2
- 3 - Assigned to Partition 3
- 4 - Assigned to Partition 4
- 5 - Assigned to Partition 5
- 6 - Assigned to Partition 6
- 7 - Assigned to Partition 7
- 8 - Assigned to Partition 8

Zone	Description	Module	Section	8-digit Serial Number	Input#	Section	Define	Assign	Zone Options
1			[0001]	/ / / / / / / /	/ / /	[0101]	—	—	1 2 3 4 5 6 7 8
2			[0002]	/ / / / / / / /	/ / /	[0102]	—	—	1 2 3 4 5 6 7 8
3			[0003]	/ / / / / / / /	/ / /	[0103]	—	—	1 2 3 4 5 6 7 8
4			[0004]	/ / / / / / / /	/ / /	[0104]	—	—	1 2 3 4 5 6 7 8
5			[0005]	/ / / / / / / /	/ / /	[0105]	—	—	1 2 3 4 5 6 7 8
6			[0006]	/ / / / / / / /	/ / /	[0106]	—	—	1 2 3 4 5 6 7 8
7			[0007]	/ / / / / / / /	/ / /	[0107]	—	—	1 2 3 4 5 6 7 8
8			[0008]	/ / / / / / / /	/ / /	[0108]	—	—	1 2 3 4 5 6 7 8
9			[0009]	/ / / / / / / /	/ / /	[0109]	—	—	1 2 3 4 5 6 7 8
10			[0010]	/ / / / / / / /	/ / /	[0110]	—	—	1 2 3 4 5 6 7 8
11			[0011]	/ / / / / / / /	/ / /	[0111]	—	—	1 2 3 4 5 6 7 8
12			[0012]	/ / / / / / / /	/ / /	[0112]	—	—	1 2 3 4 5 6 7 8
13			[0013]	/ / / / / / / /	/ / /	[0113]	—	—	1 2 3 4 5 6 7 8
14			[0014]	/ / / / / / / /	/ / /	[0114]	—	—	1 2 3 4 5 6 7 8
15			[0015]	/ / / / / / / /	/ / /	[0115]	—	—	1 2 3 4 5 6 7 8
16			[0016]	/ / / / / / / /	/ / /	[0116]	—	—	1 2 3 4 5 6 7 8
17			[0017]	/ / / / / / / /	/ / /	[0117]	—	—	1 2 3 4 5 6 7 8
18			[0018]	/ / / / / / / /	/ / /	[0118]	—	—	1 2 3 4 5 6 7 8
19			[0019]	/ / / / / / / /	/ / /	[0119]	—	—	1 2 3 4 5 6 7 8
20			[0020]	/ / / / / / / /	/ / /	[0120]	—	—	1 2 3 4 5 6 7 8
21			[0021]	/ / / / / / / /	/ / /	[0121]	—	—	1 2 3 4 5 6 7 8
22			[0022]	/ / / / / / / /	/ / /	[0122]	—	—	1 2 3 4 5 6 7 8
23			[0023]	/ / / / / / / /	/ / /	[0123]	—	—	1 2 3 4 5 6 7 8

Zone	Description	Module	Section	8-digit Serial Number	Input#	Section	Define	Assign	Zone Options
24			[0024]	/ / / / / / / /	/ / /	[0124]	—	—	1 2 3 4 5 6 7 8
25			[0025]	/ / / / / / / /	/ / /	[0125]	—	—	1 2 3 4 5 6 7 8
26			[0026]	/ / / / / / / /	/ / /	[0126]	—	—	1 2 3 4 5 6 7 8
27			[0027]	/ / / / / / / /	/ / /	[0127]	—	—	1 2 3 4 5 6 7 8
28			[0028]	/ / / / / / / /	/ / /	[0128]	—	—	1 2 3 4 5 6 7 8
29			[0029]	/ / / / / / / /	/ / /	[0129]	—	—	1 2 3 4 5 6 7 8
30			[0030]	/ / / / / / / /	/ / /	[0130]	—	—	1 2 3 4 5 6 7 8
31			[0031]	/ / / / / / / /	/ / /	[0131]	—	—	1 2 3 4 5 6 7 8
32			[0032]	/ / / / / / / /	/ / /	[0132]	—	—	1 2 3 4 5 6 7 8
33			[0033]	/ / / / / / / /	/ / /	[0133]	—	—	1 2 3 4 5 6 7 8
34			[0034]	/ / / / / / / /	/ / /	[0134]	—	—	1 2 3 4 5 6 7 8
35			[0035]	/ / / / / / / /	/ / /	[0135]	—	—	1 2 3 4 5 6 7 8
36			[0036]	/ / / / / / / /	/ / /	[0136]	—	—	1 2 3 4 5 6 7 8
37			[0037]	/ / / / / / / /	/ / /	[0137]	—	—	1 2 3 4 5 6 7 8
38			[0038]	/ / / / / / / /	/ / /	[0138]	—	—	1 2 3 4 5 6 7 8
39			[0039]	/ / / / / / / /	/ / /	[0139]	—	—	1 2 3 4 5 6 7 8
40			[0040]	/ / / / / / / /	/ / /	[0140]	—	—	1 2 3 4 5 6 7 8
41			[0041]	/ / / / / / / /	/ / /	[0141]	—	—	1 2 3 4 5 6 7 8
42			[0042]	/ / / / / / / /	/ / /	[0142]	—	—	1 2 3 4 5 6 7 8
43			[0043]	/ / / / / / / /	/ / /	[0143]	—	—	1 2 3 4 5 6 7 8
44			[0044]	/ / / / / / / /	/ / /	[0144]	—	—	1 2 3 4 5 6 7 8
45			[0045]	/ / / / / / / /	/ / /	[0145]	—	—	1 2 3 4 5 6 7 8
46			[0046]	/ / / / / / / /	/ / /	[0146]	—	—	1 2 3 4 5 6 7 8
47			[0047]	/ / / / / / / /	/ / /	[0147]	—	—	1 2 3 4 5 6 7 8
48			[0048]	/ / / / / / / /	/ / /	[0148]	—	—	1 2 3 4 5 6 7 8
49			[0049]	/ / / / / / / /	/ / /	[0149]	—	—	1 2 3 4 5 6 7 8
50			[0050]	/ / / / / / / /	/ / /	[0150]	—	—	1 2 3 4 5 6 7 8
51			[0051]	/ / / / / / / /	/ / /	[0151]	—	—	1 2 3 4 5 6 7 8
52			[0052]	/ / / / / / / /	/ / /	[0152]	—	—	1 2 3 4 5 6 7 8
53			[0053]	/ / / / / / / /	/ / /	[0153]	—	—	1 2 3 4 5 6 7 8
54			[0054]	/ / / / / / / /	/ / /	[0154]	—	—	1 2 3 4 5 6 7 8
55			[0055]	/ / / / / / / /	/ / /	[0155]	—	—	1 2 3 4 5 6 7 8
56			[0056]	/ / / / / / / /	/ / /	[0156]	—	—	1 2 3 4 5 6 7 8
57			[0057]	/ / / / / / / /	/ / /	[0157]	—	—	1 2 3 4 5 6 7 8
58			[0058]	/ / / / / / / /	/ / /	[0158]	—	—	1 2 3 4 5 6 7 8
59			[0059]	/ / / / / / / /	/ / /	[0159]	—	—	1 2 3 4 5 6 7 8
60			[0060]	/ / / / / / / /	/ / /	[0160]	—	—	1 2 3 4 5 6 7 8
61			[0061]	/ / / / / / / /	/ / /	[0161]	—	—	1 2 3 4 5 6 7 8
62			[0062]	/ / / / / / / /	/ / /	[0162]	—	—	1 2 3 4 5 6 7 8
63			[0063]	/ / / / / / / /	/ / /	[0163]	—	—	1 2 3 4 5 6 7 8

Zone	Description	Module	Section	8-digit Serial Number	Input#	Section	Define	Assign	Zone Options
64			[0064]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0164]	_____	_____	1 2 3 4 5 6 7 8
65			[0065]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0165]	_____	_____	1 2 3 4 5 6 7 8
66			[0066]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0166]	_____	_____	1 2 3 4 5 6 7 8
67			[0067]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0167]	_____	_____	1 2 3 4 5 6 7 8
68			[0068]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0168]	_____	_____	1 2 3 4 5 6 7 8
69			[0069]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0169]	_____	_____	1 2 3 4 5 6 7 8
70			[0070]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0170]	_____	_____	1 2 3 4 5 6 7 8
71			[0071]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0171]	_____	_____	1 2 3 4 5 6 7 8
72			[0072]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0172]	_____	_____	1 2 3 4 5 6 7 8
73			[0073]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0173]	_____	_____	1 2 3 4 5 6 7 8
74			[0074]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0174]	_____	_____	1 2 3 4 5 6 7 8
75			[0075]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0175]	_____	_____	1 2 3 4 5 6 7 8
76			[0076]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0176]	_____	_____	1 2 3 4 5 6 7 8
77			[0077]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0177]	_____	_____	1 2 3 4 5 6 7 8
78			[0078]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0178]	_____	_____	1 2 3 4 5 6 7 8
79			[0079]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0179]	_____	_____	1 2 3 4 5 6 7 8
80			[0080]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0180]	_____	_____	1 2 3 4 5 6 7 8
81			[0081]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0181]	_____	_____	1 2 3 4 5 6 7 8
82			[0082]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0182]	_____	_____	1 2 3 4 5 6 7 8
83			[0083]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0183]	_____	_____	1 2 3 4 5 6 7 8
84			[0084]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0184]	_____	_____	1 2 3 4 5 6 7 8
85			[0085]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0185]	_____	_____	1 2 3 4 5 6 7 8
86			[0086]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0186]	_____	_____	1 2 3 4 5 6 7 8
87			[0087]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0187]	_____	_____	1 2 3 4 5 6 7 8
88			[0088]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0188]	_____	_____	1 2 3 4 5 6 7 8
89			[0089]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0189]	_____	_____	1 2 3 4 5 6 7 8
90			[0090]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0190]	_____	_____	1 2 3 4 5 6 7 8
91			[0091]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0191]	_____	_____	1 2 3 4 5 6 7 8
92			[0092]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0192]	_____	_____	1 2 3 4 5 6 7 8
93			[0093]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0193]	_____	_____	1 2 3 4 5 6 7 8
94			[0094]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0194]	_____	_____	1 2 3 4 5 6 7 8
95			[0095]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0195]	_____	_____	1 2 3 4 5 6 7 8
96			[0096]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0196]	_____	_____	1 2 3 4 5 6 7 8



**To clear a zone's numbering (sections [0001] to [0096]):**

**For LCD Keypads:**

- 1) Enter a section number between [0001] to [0096].
- 2) Press [0] and then [ENTER] to save and exit.

**For Grafica Keypads:**

- 1) Enter a section number between [0001] to [0096].
- 2) Press [0] to clear the serial number
- 3) Use Grafica's scroll keys, highlight the input number and then press [0] to clear the data.
- 4) Press Grafica's center action key (Save) to save and exit.

# Zone Report Codes

## Ademco slow, Silent Knight fast, SESCOA, Ademco express or Pager formats:

Key-in desired 2-digit hex values from 00 to FF.

### Ademco format:

Use section [4032] to program a set of default Ademco report codes from the *Automatic Report Code Programming* on page 45. Then to program the remaining report codes or to change some of the defaults, enter the individual sections and key-in the desired 2-digit hex value found in the *Contact ID Report Code List* on page 48.

### SIA format:

Use section [4032] to program a set of SIA report codes from the *Automatic Report Code Programming* on page 45. Codes that have not been set to default can be set to default manually by entering FF in the appropriate section. To disable the reporting of an event, enter 00 in the appropriate section.

## Zone report codes

Section	Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes	Section	Zone #	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes
[0201]	Zone 1	___	___	___	___	[0224]	Zone 24	___	___	___	___
[0202]	Zone 2	___	___	___	___	[0225]	Zone 25	___	___	___	___
[0203]	Zone 3	___	___	___	___	[0226]	Zone 26	___	___	___	___
[0204]	Zone 4	___	___	___	___	[0227]	Zone 27	___	___	___	___
[0205]	Zone 5	___	___	___	___	[0228]	Zone 28	___	___	___	___
[0206]	Zone 6	___	___	___	___	[0229]	Zone 29	___	___	___	___
[0207]	Zone 7	___	___	___	___	[0230]	Zone 30	___	___	___	___
[0208]	Zone 8	___	___	___	___	[0231]	Zone 31	___	___	___	___
[0209]	Zone 9	___	___	___	___	[0232]	Zone 32	___	___	___	___
[0210]	Zone 10	___	___	___	___	[0233]	Zone 33	___	___	___	___
[0211]	Zone 11	___	___	___	___	[0234]	Zone 34	___	___	___	___
[0212]	Zone 12	___	___	___	___	[0235]	Zone 35	___	___	___	___
[0213]	Zone 13	___	___	___	___	[0236]	Zone 36	___	___	___	___
[0214]	Zone 14	___	___	___	___	[0237]	Zone 37	___	___	___	___
[0215]	Zone 15	___	___	___	___	[0238]	Zone 38	___	___	___	___
[0216]	Zone 16	___	___	___	___	[0239]	Zone 39	___	___	___	___
[0217]	Zone 17	___	___	___	___	[0240]	Zone 40	___	___	___	___
[0218]	Zone 18	___	___	___	___	[0241]	Zone 41	___	___	___	___
[0219]	Zone 19	___	___	___	___	[0242]	Zone 42	___	___	___	___
[0220]	Zone 20	___	___	___	___	[0243]	Zone 43	___	___	___	___
[0221]	Zone 21	___	___	___	___	[0244]	Zone 44	___	___	___	___
[0222]	Zone 22	___	___	___	___	[0245]	Zone 45	___	___	___	___
[0223]	Zone 23	___	___	___	___	[0246]	Zone 46	___	___	___	___

[0247]	Zone 47	__/_	__/_	__/_	__/_
[0248]	Zone 48	__/_	__/_	__/_	__/_
[0249]	Zone 49	__/_	__/_	__/_	__/_
[0250]	Zone 50	__/_	__/_	__/_	__/_
[0251]	Zone 51	__/_	__/_	__/_	__/_
[0252]	Zone 52	__/_	__/_	__/_	__/_
[0253]	Zone 53	__/_	__/_	__/_	__/_
[0254]	Zone 54	__/_	__/_	__/_	__/_
[0255]	Zone 55	__/_	__/_	__/_	__/_
[0256]	Zone 56	__/_	__/_	__/_	__/_
[0257]	Zone 57	__/_	__/_	__/_	__/_
[0258]	Zone 58	__/_	__/_	__/_	__/_
[0259]	Zone 59	__/_	__/_	__/_	__/_
[0260]	Zone 60	__/_	__/_	__/_	__/_
[0261]	Zone 61	__/_	__/_	__/_	__/_
[0262]	Zone 62	__/_	__/_	__/_	__/_
[0263]	Zone 63	__/_	__/_	__/_	__/_
[0264]	Zone 64	__/_	__/_	__/_	__/_
[0265]	Zone 65	__/_	__/_	__/_	__/_
[0266]	Zone 66	__/_	__/_	__/_	__/_
[0267]	Zone 67	__/_	__/_	__/_	__/_
[0268]	Zone 68	__/_	__/_	__/_	__/_
[0269]	Zone 69	__/_	__/_	__/_	__/_
[0270]	Zone 70	__/_	__/_	__/_	__/_
[0271]	Zone 71	__/_	__/_	__/_	__/_

[0272]	Zone 72	__/_	__/_	__/_	__/_
[0273]	Zone 73	__/_	__/_	__/_	__/_
[0274]	Zone 74	__/_	__/_	__/_	__/_
[0275]	Zone 75	__/_	__/_	__/_	__/_
[0276]	Zone 76	__/_	__/_	__/_	__/_
[0277]	Zone 77	__/_	__/_	__/_	__/_
[0278]	Zone 78	__/_	__/_	__/_	__/_
[0279]	Zone 79	__/_	__/_	__/_	__/_
[0280]	Zone 80	__/_	__/_	__/_	__/_
[0281]	Zone 81	__/_	__/_	__/_	__/_
[0282]	Zone 82	__/_	__/_	__/_	__/_
[0283]	Zone 83	__/_	__/_	__/_	__/_
[0284]	Zone 84	__/_	__/_	__/_	__/_
[0285]	Zone 85	__/_	__/_	__/_	__/_
[0286]	Zone 86	__/_	__/_	__/_	__/_
[0287]	Zone 87	__/_	__/_	__/_	__/_
[0288]	Zone 88	__/_	__/_	__/_	__/_
[0289]	Zone 89	__/_	__/_	__/_	__/_
[0290]	Zone 90	__/_	__/_	__/_	__/_
[0291]	Zone 91	__/_	__/_	__/_	__/_
[0292]	Zone 92	__/_	__/_	__/_	__/_
[0293]	Zone 93	__/_	__/_	__/_	__/_
[0294]	Zone 94	__/_	__/_	__/_	__/_
[0295]	Zone 95	__/_	__/_	__/_	__/_
[0296]	Zone 96	__/_	__/_	__/_	__/_

# Zone Labels

Section	Zone #	Zone Label	Section	Zone #	Zone Label	Section	Zone #	Zone Label
[0301]	Zone 1	_____	[0333]	Zone 33	_____	[0365]	Zone 65	_____
[0302]	Zone 2	_____	[0334]	Zone 34	_____	[0366]	Zone 66	_____
[0303]	Zone 3	_____	[0335]	Zone 35	_____	[0367]	Zone 67	_____
[0304]	Zone 4	_____	[0336]	Zone 36	_____	[0368]	Zone 68	_____
[0305]	Zone 5	_____	[0337]	Zone 37	_____	[0369]	Zone 69	_____
[0306]	Zone 6	_____	[0338]	Zone 38	_____	[0370]	Zone 70	_____
[0307]	Zone 7	_____	[0339]	Zone 39	_____	[0371]	Zone 71	_____
[0308]	Zone 8	_____	[0340]	Zone 40	_____	[0372]	Zone 72	_____
[0309]	Zone 9	_____	[0341]	Zone 41	_____	[0373]	Zone 73	_____
[0310]	Zone 10	_____	[0342]	Zone 42	_____	[0374]	Zone 74	_____
[0311]	Zone 11	_____	[0343]	Zone 43	_____	[0375]	Zone 75	_____
[0312]	Zone 12	_____	[0344]	Zone 44	_____	[0376]	Zone 76	_____
[0313]	Zone 13	_____	[0345]	Zone 45	_____	[0377]	Zone 77	_____
[0314]	Zone 14	_____	[0346]	Zone 46	_____	[0378]	Zone 78	_____
[0315]	Zone 15	_____	[0347]	Zone 47	_____	[0379]	Zone 79	_____
[0316]	Zone 16	_____	[0348]	Zone 48	_____	[0380]	Zone 80	_____
[0317]	Zone 17	_____	[0349]	Zone 49	_____	[0381]	Zone 81	_____
[0318]	Zone 18	_____	[0350]	Zone 50	_____	[0382]	Zone 82	_____
[0319]	Zone 19	_____	[0351]	Zone 51	_____	[0383]	Zone 83	_____
[0320]	Zone 20	_____	[0352]	Zone 52	_____	[0384]	Zone 84	_____
[0321]	Zone 21	_____	[0353]	Zone 53	_____	[0385]	Zone 85	_____
[0322]	Zone 22	_____	[0354]	Zone 54	_____	[0386]	Zone 86	_____
[0323]	Zone 23	_____	[0355]	Zone 55	_____	[0387]	Zone 87	_____
[0324]	Zone 24	_____	[0356]	Zone 56	_____	[0388]	Zone 88	_____
[0325]	Zone 25	_____	[0357]	Zone 57	_____	[0389]	Zone 89	_____
[0326]	Zone 26	_____	[0358]	Zone 58	_____	[0390]	Zone 90	_____
[0327]	Zone 27	_____	[0359]	Zone 59	_____	[0391]	Zone 91	_____
[0328]	Zone 28	_____	[0360]	Zone 60	_____	[0392]	Zone 92	_____
[0329]	Zone 29	_____	[0361]	Zone 61	_____	[0393]	Zone 93	_____
[0330]	Zone 30	_____	[0362]	Zone 62	_____	[0394]	Zone 94	_____
[0331]	Zone 31	_____	[0363]	Zone 63	_____	[0395]	Zone 95	_____
[0332]	Zone 32	_____	[0364]	Zone 64	_____	[0396]	Zone 96	_____

# Keyswitch Programming

## KEYSWITCH NUMBERING

Sections [0501] to [0532] represent keyswitches 1 to 32 respectively. This feature allows you to assign a keyswitch to an addressable or hardwired detection device.

## KEYSWITCH PARAMETERS

Sections [0601] to [0632] represent keyswitches 1 to 32 respectively. This feature defines the keyswitch's partition assignment and arming method.

Enter 3-digit [INPUT NUMBER] of Module to which keyswitch is connected.

Enter 8-digit [SERIAL NUMBER] of Module to which keyswitch is connected.

### Keyswitch Partition Assignment

- 0- Not assigned to a partition (default)
- 1- Keyswitch Assigned to Partition 1
- 2- Keyswitch Assigned to Partition 2
- 3- Keyswitch Assigned to Partition 3
- 4- Keyswitch Assigned to Partition 4
- 5- Keyswitch Assigned to Partition 5
- 6- Keyswitch Assigned to Partition 6
- 7- Keyswitch Assigned to Partition 7
- 8- Keyswitch Assigned to Partition 8

### Keyswitch Definitions

- 0- Disabled (default)
- 1- Momentary Keyswitch
- 2- Maintained Keyswitch
- 3- Generates a Utility Key Event on Open\*\*
- 4- Generates a Utility Key Event on Open and Close\*\*

### Keyswitch Options

(default: all Off)

- [4] Off = Disarm  
On = Disarm only if Stay/  
Instant armed
- [5] Arm Only
- [6] \*Stay Arming
- [7] \*Force Arming
- [8] \*Instant Arming

\* Select only one. If all are off, keyswitch will regular arm.

Keyswitch	Description	Module	Section	8-digit Serial Number	Input#	Section	Define	Assign	Keyswitch Options
1			[0501]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0601]	_____	_____	4 5 6 7 8
2			[0502]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0602]	_____	_____	4 5 6 7 8
3			[0503]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0603]	_____	_____	4 5 6 7 8
4			[0504]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0604]	_____	_____	4 5 6 7 8
5			[0505]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0605]	_____	_____	4 5 6 7 8
6			[0506]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0606]	_____	_____	4 5 6 7 8
7			[0507]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0607]	_____	_____	4 5 6 7 8
8			[0508]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0608]	_____	_____	4 5 6 7 8
9			[0509]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0609]	_____	_____	4 5 6 7 8
10			[0510]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0610]	_____	_____	4 5 6 7 8
11			[0511]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0611]	_____	_____	4 5 6 7 8
12			[0512]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0612]	_____	_____	4 5 6 7 8
13			[0513]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0613]	_____	_____	4 5 6 7 8
14			[0514]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0614]	_____	_____	4 5 6 7 8
15			[0515]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0615]	_____	_____	4 5 6 7 8
16			[0516]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0616]	_____	_____	4 5 6 7 8
17			[0517]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0617]	_____	_____	4 5 6 7 8
18			[0518]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0618]	_____	_____	4 5 6 7 8
19			[0519]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0619]	_____	_____	4 5 6 7 8
20			[0520]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0620]	_____	_____	4 5 6 7 8
21			[0521]	_/ _/ _/ _/ _/ _/ _/ _/ _/	_/ _/ _/	[0621]	_____	_____	4 5 6 7 8

\*\*If you wish to use this keyswitch definition, one or more PGMs must be programmed with the Utility Key event (Event Group #048; see page 21).

Keyswitch	Description	Module	Section	8-digit Serial Number	Input#	Section	Define	Assign	Keyswitch Options
22			[0522]	__/_/__/__/_/__/__/_/	__/_/	[0622]	___	___	4 5 6 7 8
23			[0523]	__/_/__/__/_/__/__/_/	__/_/	[0623]	___	___	4 5 6 7 8
24			[0524]	__/_/__/__/_/__/__/_/	__/_/	[0624]	___	___	4 5 6 7 8
25			[0525]	__/_/__/__/_/__/__/_/	__/_/	[0625]	___	___	4 5 6 7 8
26			[0526]	__/_/__/__/_/__/__/_/	__/_/	[0626]	___	___	4 5 6 7 8
27			[0527]	__/_/__/__/_/__/__/_/	__/_/	[0627]	___	___	4 5 6 7 8
28			[0528]	__/_/__/__/_/__/__/_/	__/_/	[0628]	___	___	4 5 6 7 8
29			[0529]	__/_/__/__/_/__/__/_/	__/_/	[0629]	___	___	4 5 6 7 8
30			[0530]	__/_/__/__/_/__/__/_/	__/_/	[0630]	___	___	4 5 6 7 8
31			[0531]	__/_/__/__/_/__/__/_/	__/_/	[0631]	___	___	4 5 6 7 8
32			[0532]	__/_/__/__/_/__/__/_/	__/_/	[0632]	___	___	4 5 6 7 8

## Keyswitch Arming/Disarming Report Codes

**Ademco slow, Silent Knight fast, SESCOA, Ademco express or Pager formats:** Key-in desired 2-digit hex values from 00 to FF.

### Ademco Contact ID:

Use section [4033] to program a set of default Ademco report codes from the *Automatic Report Code Programming* on page 45. Then to program the remaining report codes or to change some of the defaults, enter the individual sections and key-in the desired 2-digit hex value found in the *Contact ID Report Code List* on page 48.

### SIA format:

Use section [4033] to program a set of SIA report codes from the *Automatic Report Code Programming* on page 45. Codes that have not been set to default can be set to default manually by entering FF in the appropriate section. To disable the reporting of an event, enter 00 in the appropriate section.

### Arming With Keyswitch Report Codes

Section	Section	Section	Section	Section	Section
[0701] __/_ Keyswitch 01	[0707] __/_ Keyswitch 07	[0713] __/_ Keyswitch 13	[0719] __/_ Keyswitch 19	[0725] __/_ Keyswitch 25	[0731] __/_ Keyswitch 31
[0702] __/_ Keyswitch 02	[0708] __/_ Keyswitch 08	[0714] __/_ Keyswitch 14	[0720] __/_ Keyswitch 20	[0726] __/_ Keyswitch 26	[0732] __/_ Keyswitch 32
[0703] __/_ Keyswitch 03	[0709] __/_ Keyswitch 09	[0715] __/_ Keyswitch 15	[0721] __/_ Keyswitch 21	[0727] __/_ Keyswitch 27	
[0704] __/_ Keyswitch 04	[0710] __/_ Keyswitch 10	[0716] __/_ Keyswitch 16	[0722] __/_ Keyswitch 22	[0728] __/_ Keyswitch 28	
[0705] __/_ Keyswitch 05	[0711] __/_ Keyswitch 11	[0717] __/_ Keyswitch 17	[0723] __/_ Keyswitch 23	[0729] __/_ Keyswitch 29	
[0706] __/_ Keyswitch 06	[0712] __/_ Keyswitch 12	[0718] __/_ Keyswitch 18	[0724] __/_ Keyswitch 24	[0730] __/_ Keyswitch 30	

### Disarming With Keyswitch Report Codes

Section	Section	Section	Section	Section	Section
[0801] __/_ Keyswitch 01	[0807] __/_ Keyswitch 07	[0813] __/_ Keyswitch 13	[0819] __/_ Keyswitch 19	[0825] __/_ Keyswitch 25	[0831] __/_ Keyswitch 31
[0802] __/_ Keyswitch 02	[0808] __/_ Keyswitch 08	[0814] __/_ Keyswitch 14	[0820] __/_ Keyswitch 20	[0826] __/_ Keyswitch 26	[0832] __/_ Keyswitch 32
[0803] __/_ Keyswitch 03	[0809] __/_ Keyswitch 09	[0815] __/_ Keyswitch 15	[0821] __/_ Keyswitch 21	[0827] __/_ Keyswitch 27	
[0804] __/_ Keyswitch 04	[0810] __/_ Keyswitch 10	[0816] __/_ Keyswitch 16	[0822] __/_ Keyswitch 22	[0828] __/_ Keyswitch 28	
[0805] __/_ Keyswitch 05	[0811] __/_ Keyswitch 11	[0817] __/_ Keyswitch 17	[0823] __/_ Keyswitch 23	[0829] __/_ Keyswitch 29	
[0806] __/_ Keyswitch 06	[0812] __/_ Keyswitch 12	[0818] __/_ Keyswitch 18	[0824] __/_ Keyswitch 24	[0830] __/_ Keyswitch 30	



# Programmable Outputs

## PGM Test Mode

Section	Description
[0901]	Test PGM1: Activates PGM1 for 8 seconds to verify if the PGM is functioning correctly.
[0902]	Test PGM2: Activates PGM2 for 8 seconds to verify if the PGM is functioning correctly.
[0903]	Test PGM3: Activates PGM3 for 8 seconds to verify if the PGM is functioning correctly.

## PGM Delay

Section	Data	Description	Default
[0918]	__/_/___ ( 001 to 255 x 1 sec./mins.)	PGM1 Delay (refer to section [0919] option [2] to see whether the delay is in seconds or minutes)	5 secs./mins.
[0928]	__/_/___ ( 001 to 255 x 1 sec./mins.)	PGM2 Delay (refer to section [0929] option [2] to see whether the delay is in seconds or minutes)	5 secs./mins.
[0938]	__/_/___ ( 001 to 255 x 1 sec./mins.)	PGM3 Delay (refer to section [0939] option [2] to see whether the delay is in seconds or minutes)	5 secs./mins.

## PGM Options

Option	(Δ = Default Setting)	PGM1 [0919]		PGM2 [0929]		PGM3 [0939]	
		OFF Disabled	ON Enabled	OFF Disabled	ON Enabled	OFF Disabled	ON Enabled
[1]	PGM Deactivation After (OFF = Deactivation Event; ON = PGM Timer)	Δ	1	Δ	1	Δ	1
[2]	PGM Base Time (OFF = Seconds; ON = Minutes)	Δ	1	Δ	1	Δ	1
[3]	Flexible PGM Deactivation Option (OFF = PGM Timer Only; ON = PGM Timer and/or Deactivation Event)	Δ	1	Δ	1	Δ	1
[4]	PGM Initial State (OFF = Normally Open; ON = Normally Closed)	Δ	1	Δ	1	Δ	1
[5] to [8]	Future Use	N/A	N/A	N/A	N/A	N/A	N/A



In order to use the Flexible PGM Deactivation Option (option [3]), the PGM Deactivation After Option (option [1]) must be ON.

## PGM Programming

		Event Group	Feature Group	Start #	End #
		Section	Section	Section	Section
PGM Activation	PGM1	[0910] __/_/___	[0911] __/_/___	[0912] __/_/___	[0913] __/_/___
	PGM2	[0920] __/_/___	[0921] __/_/___	[0922] __/_/___	[0923] __/_/___
	PGM3	[0930] __/_/___	[0931] __/_/___	[0932] __/_/___	[0933] __/_/___
PGM Deactivation	PGM1	[0914] __/_/___	[0915] __/_/___	[0916] __/_/___	[0917] __/_/___
	PGM2	[0924] __/_/___	[0925] __/_/___	[0926] __/_/___	[0927] __/_/___
	PGM3	[0934] __/_/___	[0935] __/_/___	[0936] __/_/___	[0937] __/_/___

Event Group	Event	Feature Group	Feature	Start #	End #
000	Zone is OK	000 255 = any Zone #	Zone Numbers	001 to 096	001 to 096
001	Zone is Open			001 to 096	001 to 096
002	Zone is Tampered			001 to 096	001 to 096
003	Zone is in Fire Loop Trouble			001 to 096	001 to 096

Event Group	Event	Feature Group	Feature	Start #	End #
004	Non-reportable Event	000	TLM Trouble	000	000
			Smoke detector reset	001	001
			Arm with no entry delay	002	002
			Arm in Stay mode	003	003
			Arm in Away mode	004	004
			Full arm when in Stay mode	005	005
			Voice module access	006	006
			Remote control access	007	007
			PC Fail to communicate	008	008
			Midnight	009	009
			NEware User Login	010	010
			NEware User Logout	011	011
			User Initiated Callup	012	012
			Force Answer	013	013
			Force Hangup	014	014
			Future Use	015	015
			Auxiliary Output Manually Activated	016	016
			Auxiliary Output Manually Deactivated	017	017
005	User Code entered on Keypad	255	Any Non-reportable Event	Not Used	Not Used
		000	User Codes 000 to 255	000 to 255	000 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
006	User/Card Access on Door	255	Any User Code	Not Used	Not Used
		000	Door Numbers	001 to 032	001 to 032
007	Bypass Programming Access	255	Any door #	Not Used	Not Used
		000	One-touch Bypass Programming	000	000
		000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
008	TX Delay Zone Alarm	255	Any User Code	Not Used	Not Used
		000	Zone Numbers	001 to 096	001 to 096
009	Arming with Master	255	Any zone #	Not Used	Not Used
		000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
010	Arming with User Code	255	Any User Code	Not Used	Not Used
		000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
011	Arming with Keyswitch	255	Any User Code	Not Used	Not Used
		000	Keyswitch numbers	001 to 032	001 to 032
012	Special Arming	000	Any keyswitch	Not Used	Not Used
			Auto Arming	000	000
			Arming with WinLoad	001	001
			Late to Close	002	002
			No Movement Arming	003	003
			Partial Arming	004	004
			One-touch Arming	005	005
			Future Use	006	006
			Future Use	007	007
			(InTouch) Voice Module Arming	008	008
		255	Delinquency Closing	009	009
			Any special arming event	Not Used	Not Used

Event Group	Event	Feature Group	Feature	Start #	End #
013	Disarm with Master	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
014	Disarm with User Code	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
015	Disarm with Keypad	000	Keypad numbers	001 to 032	001 to 032
		255	Any keypad	Not Used	Not Used
016	Disarm after alarm with Master	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
017	Disarm after alarm with User Code	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
018	Disarm after alarm with Keypad	000	Keypad numbers	001 to 032	001 to 032
		255	Any keypad	Not Used	Not Used
019	Alarm Cancelled with Master	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
020	Alarm Cancelled with User Code	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
021	Alarm Cancelled with Keypad	000	Keypad numbers	001 to 032	001 to 032
		255	Any keypad	Not Used	Not Used
022	Special Disarming	000	Auto Arm Cancelled	000	000
			One-touch Stay/Instant Disarm	001	001
			Disarming with WinLoad	002	002
			Disarming with WinLoad after alarm	003	003
			WinLoad cancelled alarm	004	004
			Future Use	005	005
			Future Use	006	006
			Future Use	007	007
			(InTouch) Voice Module Disarming	008	008
		255	Any Special Disarming Event	Not Used	Not Used
023	Zone Bypassed	000 255 = any zone #	Zone Numbers	001 to 096	001 to 096
024	Zone in Alarm			001 to 096	001 to 096
025	Fire Alarm			001 to 096	001 to 096
026	Zone Alarm Restore			001 to 096	001 to 096
027	Fire Alarm Restore			001 to 096	001 to 096
028	Early to Disarm by User	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used

Event Group	Event	Feature Group	Feature	Start #	End #
029	<i>Late to Disarm by User</i>	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
030	<i>Special Alarm</i>	000	Emergency Panic (keys 1 & 3)	000	000
			Medical Panic (keys 4 & 6)	001	001
			Fire Panic (keys 7 & 9)	002	002
			Recent Closing	003	003
			Police Code	004	004
			Zone Shutdown	005	005
		255	Any Special Alarm Event	Not Used	Not Used
031	<i>Duress Alarm by User</i>	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
032	<i>Zone Shutdown</i>	000 255 = any zone #	Zone Numbers	001 to 096	001 to 096
033	<i>Zone Tamper</i>			001 to 096	001 to 096
034	<i>Zone Tamper Restore</i>			001 to 096	001 to 096
035	<i>Special Tamper</i>	000	Keypad Lockout	000	000
036	<i>Trouble Event</i>	000	Future Use	000	000
			AC Failure	001	001
			Battery Failure	002	002
			Auxiliary Current Limit	003	003
			Bell Current Limit	004	004
			Bell Absent	005	005
			Clock Trouble	006	006
			Global Fire Loop	007	007
		255	Any Trouble Event	Not Used	Not Used
037	<i>Trouble Restore</i>	000	TLM Trouble	000	000
			AC Failure	001	001
			Battery Failure	002	002
			Auxiliary Current Limit	003	003
			Bell Current Limit	004	004
			Bell Absent	005	005
			Clock Trouble	006	006
			Global Fire Loop	007	007
		255	Any Trouble Restore Event	Not Used	Not Used
038	<i>Module Trouble</i>	000	Combus Fault	000	000
			Module Tamper	001	001
			ROM/RAM error	002	002
			TLM Trouble	003	003
			Fail to Communicate	004	004
			Printer Fault	005	005
			AC Failure	006	006
			Battery Failure	007	007
			Auxiliary Failure	008	008
		255	Any Module Trouble Event	Not Used	Not Used
039	<i>Module Trouble Restore</i>	000	Combus Fault	000	000
			Module Tamper	001	001
			ROM/RAM error	002	002
			TLM Trouble	003	003
			Fail to Communicate	004	004
			Printer Fault	005	005
			AC Failure	006	006
			Battery Failure	007	007
			Auxiliary Failure	008	008
		255	Any Module Trouble Restore Event	Not Used	Not Used

Event Group	Event	Feature Group	Feature	Start #	End #
040	Fail to Communicate on Telephone Number	000	Telephone Number	001 to 004	001 to 004
		255	Any telephone number	Not Used	Not Used
041	Low Battery on Zone	000 255 = any Zone #	Zone Numbers	001 to 096	001 to 096
042	Zone Supervision Trouble			001 to 096	001 to 096
043	Low Battery on Zone Restored			001 to 096	001 to 096
044	Zone Supervision Trouble Restored			001 to 096	001 to 096
045	Special Events	000	Power up after total power down	000	000
			Software reset (Watchdog)	001	001
			Test Report	002	002
			Listen-In Request	003	003
			WinLoad In (connected)	004	004
			WinLoad Out (disconnected)	005	005
			Installer in programming	006	006
			Installer out of programming	007	007
		255	Any Special Event	Not Used	Not Used
046	Early to Arm by User	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
047	Late to Arm by User	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
048	Utility Key	000	Utility Key 001 to 064†*	001 to 064	001 to 064
		255	Any Utility Key†*	Not Used	Not Used
049	Request for Exit	000 255 = any Door Number	Door Numbers	001 to 032	001 to 032
050	Access Denied			001 to 032	001 to 032
051	Door Left Open Alarm			001 to 032	001 to 032
052	Door Forced Alarm			001 to 032	001 to 032
053	Door Left Open Restore			001 to 032	001 to 032
054	Door Forced Open Restore			001 to 032	001 to 032
055	Intellizone Triggered	000	Zone Numbers	001 to 096	001 to 096
		255	Any zone number	Not Used	Not Used
056	Zone Excluded on Force Arming	000	Zone Numbers	001 to 096	001 to 096
057	Zone Went Back to Arm Status	255 = Any Zone	Zone Numbers	001 to 096	001 to 096
058	New Module Assigned on Combust	000 255 = Any Module	Module Address	001 to 254	001 to 254
059	Module Manually Removed From Combust		Module Address	001 to 254	001 to 254
060 - 061	Future Use	Future Use	Future Use	Future Use	Future Use
062	Access Granted to User	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used
063	Access Denied to User	000	User Codes 001 to 255	001 to 255	001 to 255
		001	User Codes 256 to 511	000 to 255	000 to 255
		002	User Codes 512 to 767	000 to 255	000 to 255
		003	User Codes 768 to 999	000 to 231	000 to 231
		255	Any User Code	Not Used	Not Used

†: See page 23

\*: See page 23

Event Group	Event	Feature Group	Feature	Start #	End #
064	Status 1	See Note 1 on page 23	Armed	000	000
			Force Armed	001	001
			Stay Armed	002	002
			Instant Armed	003	003
			Strobe Alarm	004	004
			Silent Alarm	005	005
			Audible Alarm	006	006
			Fire Alarm	007	007
065	Status 2	See Note 1 on page 23	Ready	000	000
			Exit Delay	001	001
			Entry Delay	002	002
			System in Trouble	003	003
			Alarm in Memory	004	004
			Zones Bypassed	005	005
			Bypass, Master, Installer Programming	006	006
			Keypad Lockout	007	007
066	Status 3	See Note 1 on page 23	Intellizone Delay Engaged*	000	000
			Fire Delay Engaged	001	001
			Auto Arm	002	002
			Arming with Voice Module (set until Exit Delay finishes)	003	003
			Tamper	004	004
			Zone Low Battery	005	005
			Fire Loop Trouble	006	006
			Zone Supervision Trouble	007	007
067	Special Status	N/A	Chime in Partition 1 to 4 (000 to 003 = System 1 to 4)	000 to 003	000 to 003
			Smoke Detector Power Reset	004	004
			Ground Start	005	005
			Kiss Off	006	006
			Telephone Ring	007	007
			Bell on Partition 1 to 8 (008 to 015 = Partitions 1 to 8)	008 to 015	008 to 015
			Pulsed Alarm in Partition 1 to 8 (016 to 023 = Partitions 1 to 8)	016 to 023	016 to 023
			Open/close Kiss Off in Partition 1 to 8 (024 to 031 = Partitions 1 to 8)	024 to 031	024 to 031
			Keyswitch/PGM Inputs # 01 to 32 (032 to 063 = Keyswitch/PGM Inputs # 01 to 32)	032 to 063	032 to 063
			Status of Access Door 01 to 32 (064 to 095 = Access Doors 01 to 32)	064 to 095	064 to 095
			Trouble in System	096	096
			Trouble in Dialer	097	097
			Trouble in Module	098	098
			Trouble in Combust	099	099
			Future Use	100 to 102	100 to 102
			Time and Date Trouble	103	103
			AC Failure	104	104
			Battery Failure	105	105
			Auxiliary Current Limit	106	106
			Bell Current Limit	107	107
			Bell Absent	108	108
			ROM error	109	109
			RAM error	110	110
			Future Use	111	111
			TLM 1 Trouble	112	112
			Fail to Communicate 1	113	113
			Fail to Communicate 2	114	114
			Fail to Communicate 3	115	115
			Fail to Communicate 4	116	116
			Fail to Communicate with PC	117	117

Event Group	Event	Feature Group	Feature	Start #	End #
<b>067</b>	<i>Special Status</i>	<b>N/A</b>	Future Use	118	118
			Future Use	119	119
			Module Tamper Trouble	120	120
			Module ROM error	121	121
			Module TLM error	122	122
			Module Failure to Communicate	123	123
			Module Printer Trouble	124	124
			Module AC Failure	125	125
			Module Battery Trouble	126	126
			Module Auxiliary Failure	127	127
			Missing Keypad	128	128
			Missing Module	129	129
			Future Use	130 to 132	130 to 132
			Global Combustion Failure	133	133
			Combustion Overload	134	134
			Future Use	135	135
			Dialer Relay	136	136
<b>070</b>	<i>Clock</i>	<b>N/A</b>		Hour	Minutes

**NOTE 1:** **000** = Occurs in all partitions enabled in the system (see section [3031]).

**001** = Partition 1   **003** = Partition 3   **005** = Partition 5   **007** = Partition 7   **255** = Occurs in at least one partition enabled in the system.

**002** = Partition 2   **004** = Partition 4   **006** = Partition 6   **008** = Partition 8

**NOTE 2:** This event cannot be used for a module's PGM programming.

\*: If a Keyswitch Input is used, the input must be defined as "Generates a Utility Key Event on Open" or "Generates a Utility Key Event on Open and Close". If a remote control is used, the remote control button must be defined as a Utility Key button.

†: Actions that Activate a Utility Key Event:

Utility Key Event	Actions			
	Keypad Utility Keys	Keyswitch Inputs (definition = [3])	Keyswitch Inputs (definition = [4])	Remote Control
Utility Key Event 1	[1] & [2]	KS** Input 1 opens	KS** Input 1 opens	Utility Key 1 RC button <sup>†</sup>
Utility Key Event 2	[4] & [5]	KS** Input 2 opens	KS** Input 1 closes	Utility Key 2 RC button <sup>†</sup>
Utility Key Event 3	[7] & [8]	KS** Input 3 opens	KS** Input 2 opens	Utility Key 3 RC button <sup>†</sup>
Utility Key Event 4	[CLEAR] & [0] or [*] & [0]	KS** Input 4 opens	KS** Input 2 closes	Utility Key 4 RC button <sup>†</sup>
Utility Key Event 5	[2] & [3]	KS** Input 5 opens	KS** Input 3 opens	Utility Key 5 RC button <sup>†</sup>
Utility Key Event 6	[5] & [6]	KS** Input 6 opens	KS** Input 3 closes	N/A
Utility Key Event 7	[8] & [9]	KS** Input 7 opens	KS** Input 4 opens	N/A
Utility Key Event 8	[0] & [ENTER] or [0] & [#]	KS** Input 8 opens	KS** Input 4 closes	N/A
Utility Key Event 9	N/A	KS** Input 9 opens	KS** Input 5 opens	N/A
Utility Key Event 10	N/A	KS** Input 10 opens	KS** Input 5 closes	N/A
Utility Key Event 11	N/A	KS** Input 11 opens	KS** Input 6 opens	N/A
Utility Key Event 12	N/A	KS** Input 12 opens	KS** Input 6 closes	N/A
Utility Key Event 13	N/A	KS** Input 13 opens	KS** Input 7 opens	N/A
Utility Key Event 14	N/A	KS** Input 14 opens	KS** Input 7 closes	N/A
Utility Key Event 15	N/A	KS** Input 15 opens	KS** Input 8 opens	N/A
Utility Key Event 16	N/A	KS** Input 16 opens	KS** Input 8 closes	N/A
Utility Key Event 17	N/A	KS** Input 17 opens	KS** Input 9 opens	N/A
Utility Key Event 18	N/A	KS** Input 18 opens	KS** Input 9 closes	N/A
↓	N/A	↓	↓	N/A
Utility Key Event 31	N/A	KS** Input 31 opens	KS** Input 16 opens	N/A
Utility Key Event 32	N/A	KS** Input 32 opens	KS** Input 16 closes	N/A
Utility Key Event 33	N/A	N/A	KS** Input 17 opens	N/A
Utility Key Event 34	N/A	N/A	KS** Input 17 closes	N/A
↓	N/A	N/A	↓	N/A
Utility Key Event 63	N/A	N/A	KS** Input 32 opens	N/A
Utility Key Event 64	N/A	N/A	KS** Input 32 closes	N/A

\*\* Keyswitch

<sup>†</sup> Refer to the MG-RCV3 *Reference and Installation Manual* for remote control button programming instructions.

## Input Speeds

Section	Data - Decimal Value (001 - 255)	Description	Default
[0961]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 01	600 msec.
[0962]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 02	600 msec.
[0963]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 03	600 msec.
[0964]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 04	600 msec.
[0965]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 05	600 msec.
[0966]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 06	600 msec.
[0967]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 07	600 msec.
[0968]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 08	600 msec.
[0969]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 09 (ATZ OF INPUT 01)	600 msec.
[0970]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 10 (ATZ OF INPUT 02)	600 msec.
[0971]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 11 (ATZ OF INPUT 03)	600 msec.
[0972]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 12 (ATZ OF INPUT 04)	600 msec.
[0973]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 13 (ATZ OF INPUT 05)	600 msec.
[0974]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 14 (ATZ OF INPUT 06)	600 msec.
[0975]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 15 (ATZ OF INPUT 07)	600 msec.
[0976]	__/_/___ (001 to 255) x 30 msec.	INPUT SPEED OF INPUT 16 (ATZ OF INPUT 08)	600 msec.

## Installer Code Programming

Section	Data	Description	Default
[1000]	__/_/___/___/___	INSTALLER CODE (REFER TO SECTION [3001], <i>Installer lock</i> ON PAGE 31)	000000




# User Code Options

## Sections [1001] to [1999]

The instructions that follow detail how to program access codes when using an LCD keypad. Program User Code Options, Partition Assignment and Access Control features for users 001 to 999. Refer to the appropriate keypad User's Manual for instructions on how certain users can program these values. For instructions on how to program users when using a Grafica keypad, refer to Grafica's User Manual. A complete Grafica User Manual is available on our Web site at paradox.com.



To program user labels, refer to the LCD Keypad User Guide.

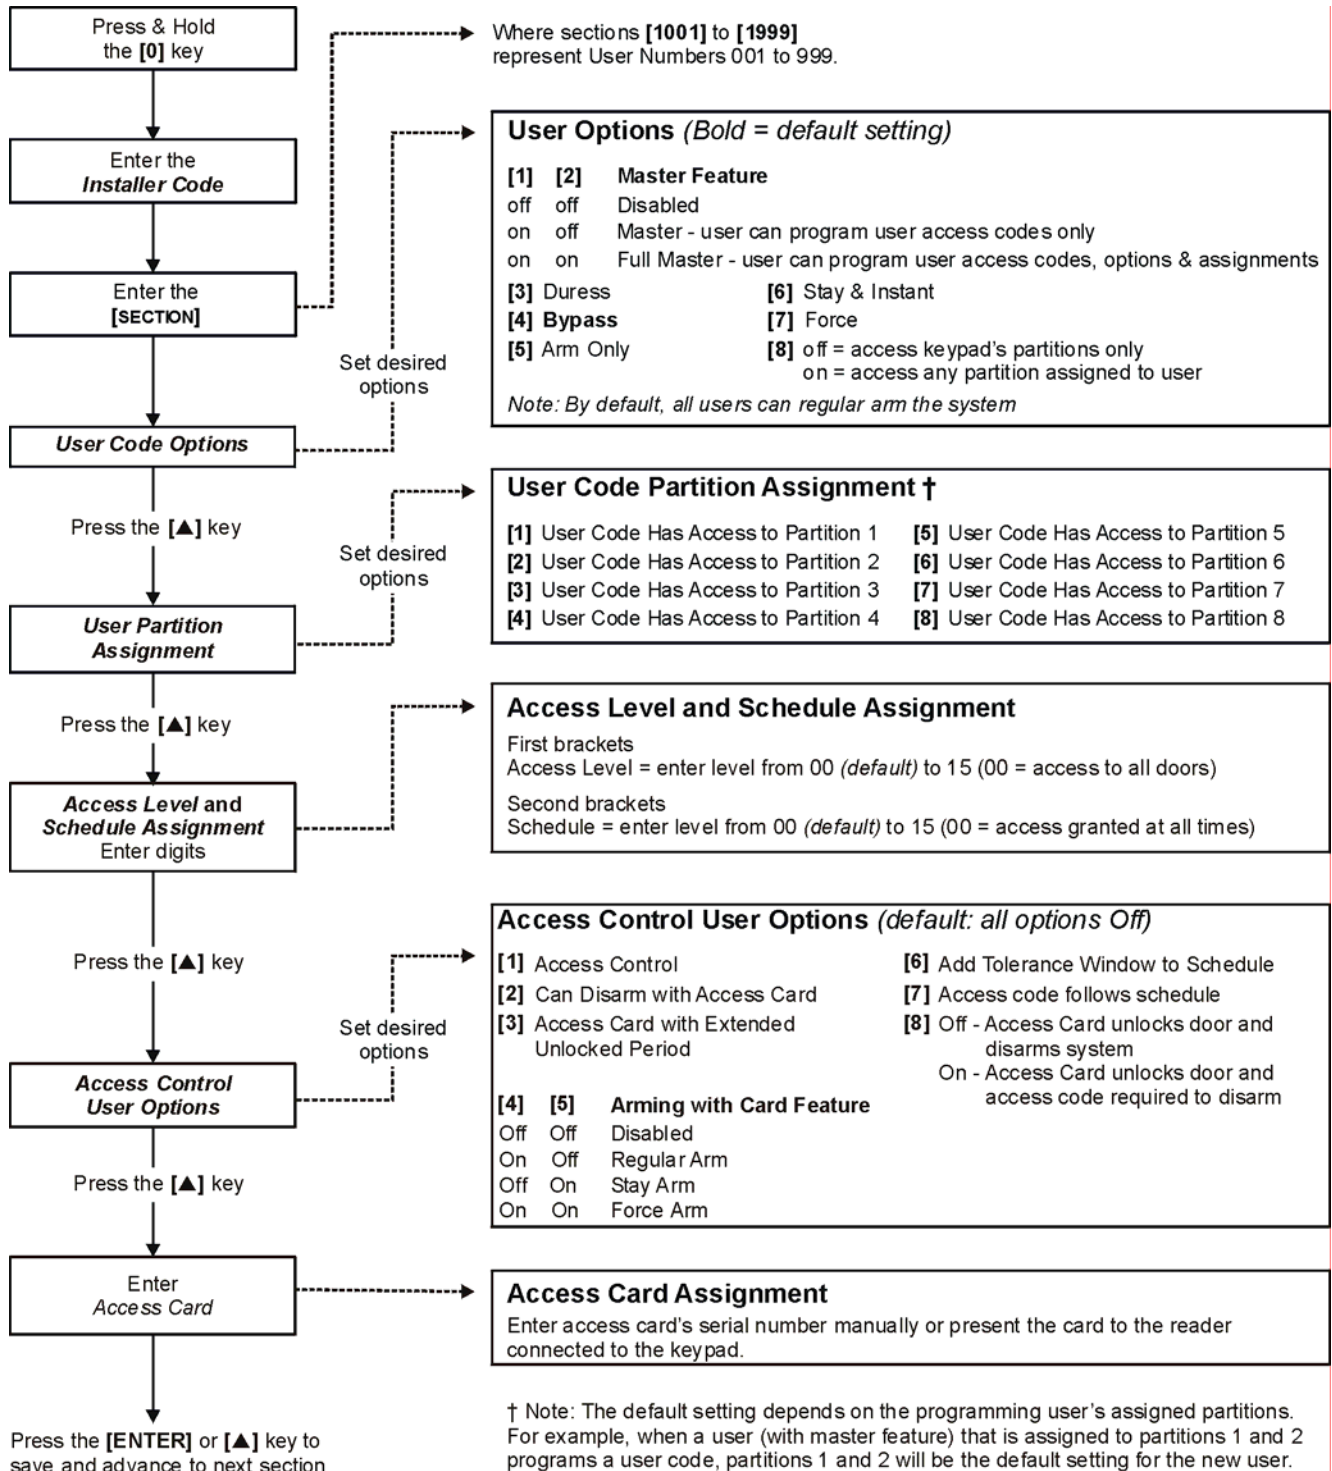

# Arming and Disarming Report Codes

Ademco slow, Silent Knight fast, SESCOA, Ademco express or Pager formats:

Key-in desired 2-digit hex values from 00 to FF.

## Ademco format:

Use section [4033] to program a set of default Ademco report codes from the *Automatic Report Code Programming* on page 45. Then to program the remaining report codes or to change some of the defaults, enter the individual sections and key-in the desired 2-digit hex value found in the *Contact ID Report Code List* on page 48.

## SIA format:

Use section [4033] to program a set of SIA report codes from the *Automatic Report Code Programming* on page 45. Codes that have not been set to default can be set to default manually by entering FF in the appropriate section. To disable the reporting of an event, enter 00 in the appropriate section.

## Arming Report Codes

Section		Section		Section		Section	
[2001]	___ Access Code 1	[2026]	___ Access Code 26	[2051]	___ Access Code 51	[2076]	___ Access Code 76
[2002]	___ Access Code 2	[2027]	___ Access Code 27	[2052]	___ Access Code 52	[2077]	___ Access Code 77
[2003]	___ Access Code 3	[2028]	___ Access Code 28	[2053]	___ Access Code 53	[2078]	___ Access Code 78
[2004]	___ Access Code 4	[2029]	___ Access Code 29	[2054]	___ Access Code 54	[2079]	___ Access Code 79
[2005]	___ Access Code 5	[2030]	___ Access Code 30	[2055]	___ Access Code 55	[2080]	___ Access Code 80
[2006]	___ Access Code 6	[2031]	___ Access Code 31	[2056]	___ Access Code 56	[2081]	___ Access Code 81
[2007]	___ Access Code 7	[2032]	___ Access Code 32	[2057]	___ Access Code 57	[2082]	___ Access Code 82
[2008]	___ Access Code 8	[2033]	___ Access Code 33	[2058]	___ Access Code 58	[2083]	___ Access Code 83
[2009]	___ Access Code 9	[2034]	___ Access Code 34	[2059]	___ Access Code 59	[2084]	___ Access Code 84
[2010]	___ Access Code 10	[2035]	___ Access Code 35	[2060]	___ Access Code 60	[2085]	___ Access Code 85
[2011]	___ Access Code 11	[2036]	___ Access Code 36	[2061]	___ Access Code 61	[2086]	___ Access Code 86
[2012]	___ Access Code 12	[2037]	___ Access Code 37	[2062]	___ Access Code 62	[2087]	___ Access Code 87
[2013]	___ Access Code 13	[2038]	___ Access Code 38	[2063]	___ Access Code 63	[2088]	___ Access Code 88
[2014]	___ Access Code 14	[2039]	___ Access Code 39	[2064]	___ Access Code 64	[2089]	___ Access Code 89
[2015]	___ Access Code 15	[2040]	___ Access Code 40	[2065]	___ Access Code 65	[2090]	___ Access Code 90
[2016]	___ Access Code 16	[2041]	___ Access Code 41	[2066]	___ Access Code 66	[2091]	___ Access Code 91
[2017]	___ Access Code 17	[2042]	___ Access Code 42	[2067]	___ Access Code 67	[2092]	___ Access Code 92
[2018]	___ Access Code 18	[2043]	___ Access Code 43	[2068]	___ Access Code 68	[2093]	___ Access Code 93
[2019]	___ Access Code 19	[2044]	___ Access Code 44	[2069]	___ Access Code 69	[2094]	___ Access Code 94
[2020]	___ Access Code 20	[2045]	___ Access Code 45	[2070]	___ Access Code 70	[2095]	___ Access Code 95
[2021]	___ Access Code 21	[2046]	___ Access Code 46	[2071]	___ Access Code 71	[2096]	___ Access Code 96
[2022]	___ Access Code 22	[2047]	___ Access Code 47	[2072]	___ Access Code 72	[2097]	___ Access Code 97
[2023]	___ Access Code 23	[2048]	___ Access Code 48	[2073]	___ Access Code 73	[2098]	___ Access Code 98
[2024]	___ Access Code 24	[2049]	___ Access Code 49	[2074]	___ Access Code 74	[2099]	___ Access Codes 99 to 999
[2025]	___ Access Code 25	[2050]	___ Access Code 50	[2075]	___ Access Code 75		

## Disarming Report Codes

Section		Section		Section		Section	
[2101]	___ Access Code 1	[2107]	___ Access Code 7	[2113]	___ Access Code 13	[2119]	___ Access Code 19
[2102]	___ Access Code 2	[2108]	___ Access Code 8	[2114]	___ Access Code 14	[2120]	___ Access Code 20
[2103]	___ Access Code 3	[2109]	___ Access Code 9	[2115]	___ Access Code 15	[2121]	___ Access Code 21
[2104]	___ Access Code 4	[2110]	___ Access Code 10	[2116]	___ Access Code 16	[2122]	___ Access Code 22
[2105]	___ Access Code 5	[2111]	___ Access Code 11	[2117]	___ Access Code 17	[2123]	___ Access Code 23
[2106]	___ Access Code 6	[2112]	___ Access Code 12	[2118]	___ Access Code 18	[2124]	___ Access Code 24

[2125]	___/___ Access Code 25	[2144]	___/___ Access Code 44	[2163]	___/___ Access Code 63	[2182]	___/___ Access Code 82
[2126]	___/___ Access Code 26	[2145]	___/___ Access Code 45	[2164]	___/___ Access Code 64	[2183]	___/___ Access Code 83
[2127]	___/___ Access Code 27	[2146]	___/___ Access Code 46	[2165]	___/___ Access Code 65	[2184]	___/___ Access Code 84
[2128]	___/___ Access Code 28	[2147]	___/___ Access Code 47	[2166]	___/___ Access Code 66	[2185]	___/___ Access Code 85
[2129]	___/___ Access Code 29	[2148]	___/___ Access Code 48	[2167]	___/___ Access Code 67	[2186]	___/___ Access Code 86
[2130]	___/___ Access Code 30	[2149]	___/___ Access Code 49	[2168]	___/___ Access Code 68	[2187]	___/___ Access Code 87
[2131]	___/___ Access Code 31	[2150]	___/___ Access Code 50	[2169]	___/___ Access Code 69	[2188]	___/___ Access Code 88
[2132]	___/___ Access Code 32	[2151]	___/___ Access Code 51	[2170]	___/___ Access Code 70	[2189]	___/___ Access Code 89
[2133]	___/___ Access Code 33	[2152]	___/___ Access Code 52	[2171]	___/___ Access Code 71	[2190]	___/___ Access Code 90
[2134]	___/___ Access Code 34	[2153]	___/___ Access Code 53	[2172]	___/___ Access Code 72	[2191]	___/___ Access Code 91
[2135]	___/___ Access Code 35	[2154]	___/___ Access Code 54	[2173]	___/___ Access Code 73	[2192]	___/___ Access Code 92
[2136]	___/___ Access Code 36	[2155]	___/___ Access Code 55	[2174]	___/___ Access Code 74	[2193]	___/___ Access Code 93
[2137]	___/___ Access Code 37	[2156]	___/___ Access Code 56	[2175]	___/___ Access Code 75	[2194]	___/___ Access Code 94
[2138]	___/___ Access Code 38	[2157]	___/___ Access Code 57	[2176]	___/___ Access Code 76	[2195]	___/___ Access Code 95
[2139]	___/___ Access Code 39	[2158]	___/___ Access Code 58	[2177]	___/___ Access Code 77	[2196]	___/___ Access Code 96
[2140]	___/___ Access Code 40	[2159]	___/___ Access Code 59	[2178]	___/___ Access Code 78	[2197]	___/___ Access Code 97
[2141]	___/___ Access Code 41	[2160]	___/___ Access Code 60	[2179]	___/___ Access Code 79	[2198]	___/___ Access Code 98
[2142]	___/___ Access Code 42	[2161]	___/___ Access Code 61	[2180]	___/___ Access Code 80	[2199]	___/___ Access Codes
[2143]	___/___ Access Code 43	[2162]	___/___ Access Code 62	[2181]	___/___ Access Code 81		99 to 999

## Access Control Sections

### Assigning a Door to the System

These doors are used to program the Access Levels in sections [2601] to [2615]. If you want a door to be linked to the alarm system, install a door contact and assign it to a zone through *Zone Programming*. **Note: Under the Door Numbering column (see below), enter the 8-digit serial number of the Access Control Module or Keypad.**

Door Numbering <sup>=</sup>			Door Options <sup>==</sup>		Door Labels	
Door #	Section	Serial Number	Section	Option	Section	Label
Door 01	[2201]	___/___/___/___/___/___/___/___	[2251]	1 2 3 4 5 * * *	[2301]	___/___/___/___/___/___/___/___
Door 02	[2202]	___/___/___/___/___/___/___/___	[2252]	1 2 3 4 5 * * *	[2302]	___/___/___/___/___/___/___/___
Door 03	[2203]	___/___/___/___/___/___/___/___	[2253]	1 2 3 4 5 * * *	[2303]	___/___/___/___/___/___/___/___
Door 04	[2204]	___/___/___/___/___/___/___/___	[2254]	1 2 3 4 5 * * *	[2304]	___/___/___/___/___/___/___/___
Door 05	[2205]	___/___/___/___/___/___/___/___	[2255]	1 2 3 4 5 * * *	[2305]	___/___/___/___/___/___/___/___
Door 06	[2206]	___/___/___/___/___/___/___/___	[2256]	1 2 3 4 5 * * *	[2306]	___/___/___/___/___/___/___/___
Door 07	[2207]	___/___/___/___/___/___/___/___	[2257]	1 2 3 4 5 * * *	[2307]	___/___/___/___/___/___/___/___
Door 08	[2208]	___/___/___/___/___/___/___/___	[2258]	1 2 3 4 5 * * *	[2308]	___/___/___/___/___/___/___/___
Door 09	[2209]	___/___/___/___/___/___/___/___	[2259]	1 2 3 4 5 * * *	[2309]	___/___/___/___/___/___/___/___
Door 10	[2210]	___/___/___/___/___/___/___/___	[2260]	1 2 3 4 5 * * *	[2310]	___/___/___/___/___/___/___/___
Door 11	[2211]	___/___/___/___/___/___/___/___	[2261]	1 2 3 4 5 * * *	[2311]	___/___/___/___/___/___/___/___
Door 12	[2212]	___/___/___/___/___/___/___/___	[2262]	1 2 3 4 5 * * *	[2312]	___/___/___/___/___/___/___/___
Door 13	[2213]	___/___/___/___/___/___/___/___	[2263]	1 2 3 4 5 * * *	[2313]	___/___/___/___/___/___/___/___
Door 14	[2214]	___/___/___/___/___/___/___/___	[2264]	1 2 3 4 5 * * *	[2314]	___/___/___/___/___/___/___/___
Door 15	[2215]	___/___/___/___/___/___/___/___	[2265]	1 2 3 4 5 * * *	[2315]	___/___/___/___/___/___/___/___
Door 16	[2216]	___/___/___/___/___/___/___/___	[2266]	1 2 3 4 5 * * *	[2316]	___/___/___/___/___/___/___/___
Door 17	[2217]	___/___/___/___/___/___/___/___	[2267]	1 2 3 4 5 * * *	[2317]	___/___/___/___/___/___/___/___
Door 18	[2218]	___/___/___/___/___/___/___/___	[2268]	1 2 3 4 5 * * *	[2318]	___/___/___/___/___/___/___/___

Door 19	[2219]	_/ _/ _/ _/ _/ _/ _/ _/ _/	[2269]	1 2 3 4 5 * * *	[2319]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 20	[2220]	_/ _/ _/ _/ _/ _/ _/ _/	[2270]	1 2 3 4 5 * * *	[2320]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 21	[2221]	_/ _/ _/ _/ _/ _/ _/ _/	[2271]	1 2 3 4 5 * * *	[2321]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 22	[2222]	_/ _/ _/ _/ _/ _/ _/ _/	[2272]	1 2 3 4 5 * * *	[2322]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 23	[2223]	_/ _/ _/ _/ _/ _/ _/ _/	[2273]	1 2 3 4 5 * * *	[2323]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 24	[2224]	_/ _/ _/ _/ _/ _/ _/ _/	[2274]	1 2 3 4 5 * * *	[2324]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 25	[2225]	_/ _/ _/ _/ _/ _/ _/ _/	[2275]	1 2 3 4 5 * * *	[2325]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 26	[2226]	_/ _/ _/ _/ _/ _/ _/ _/	[2276]	1 2 3 4 5 * * *	[2326]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 27	[2227]	_/ _/ _/ _/ _/ _/ _/ _/	[2277]	1 2 3 4 5 * * *	[2327]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 28	[2228]	_/ _/ _/ _/ _/ _/ _/ _/	[2278]	1 2 3 4 5 * * *	[2328]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 29	[2229]	_/ _/ _/ _/ _/ _/ _/ _/	[2279]	1 2 3 4 5 * * *	[2329]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 30	[2230]	_/ _/ _/ _/ _/ _/ _/ _/	[2280]	1 2 3 4 5 * * *	[2330]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 31	[2231]	_/ _/ _/ _/ _/ _/ _/ _/	[2281]	1 2 3 4 5 * * *	[2331]	_/ _/ _/ _/ _/ _/ _/ _/ _/
Door 32	[2232]	_/ _/ _/ _/ _/ _/ _/ _/	[2282]	1 2 3 4 5 * * *	[2332]	_/ _/ _/ _/ _/ _/ _/ _/ _/

== Door Options: **[1]** "OR/AND" Door Access - Each door can be programmed to grant access only to cards assigned to at least one of the door's partitions ("OR" Door Access) or to cards assigned to all the door's assigned partitions ("AND" Door Access). Enabling option **[1]** will set the door in "OR" Door Access Mode. Disabling option **[1]** will set the door in "AND" Door Access Mode.

**[2]** User Code Access - When option **[2]** is disabled, the access control door is accessed through the reader by presenting the access card to the reader. When option **[2]** is enabled, a reader is not needed to access the controlled door. To access the controlled door, the user must enter their access code and then press the **[Acc]** button. (DGP2-641RB only)

**[3]** Card and Code Access - Enabling option **[3]** will require that both a valid access control card and a valid user access code be used. The access control card and user access code must belong to the same user. Disabling option **[3]** requires that either a valid access control card or a valid user access code be used to access the controlled door. (PosiPIN™ reader only)

**[4]** Restrict Arming on Door - When option **[4]** is enabled, that door's reader cannot be used to arm the system even if the access control card has the arming option enabled.

**[5]** Restrict Disarming on Door - When option **[5]** is enabled, that door's reader cannot be used to disarm the system even if the access control card has the disarming option enabled.

## Schedule Programming

Each Schedule determines when users are permitted access. Schedules 001 to 015 (sections **[2401]** to **[2415]**) are Primary Schedules. The Primary Schedules are the only schedules that can be assigned to a User Access Code. Schedules 016 to 032 (sections **[2416]** to **[2432]**) are Secondary Schedules. The Secondary Schedules cannot be assigned to a User Access Code and can only be used as backup schedules.

	Section	Schedule	Intervals	Start Time (from)	End Time (to)	Days (turn ON or OFF)						
						S	M	T	W	T	F	S H
PRIMARY SCHEDULES	<b>[2401]</b>	001	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2402]</b>	002	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2403]</b>	003	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2404]</b>	004	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2405]</b>	005	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2406]</b>	006	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2407]</b>	007	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2408]</b>	008	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2409]</b>	009	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2410]</b>	010	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2411]</b>	011	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
	<b>[2412]</b>	012	Schedule A	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8
			Schedule B	_____ : _____	_____ : _____	1	2	3	4	5	6	7 8

Section	Schedule	Intervals	Start Time (from)	End Time (to)	Days (turn ON or OFF)							
					S	M	T	W	T	F	S	H
SECONDARY SCHEDULES	[2413]	013	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2414]	014	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2415]	015	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2416]	016	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2417]	017	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2418]	018	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2419]	019	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2420]	020	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2421]	021	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2422]	022	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2423]	023	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2424]	024	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2425]	025	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2426]	026	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2427]	027	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2428]	028	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2429]	029	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2430]	030	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2431]	031	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8
	[2432]	032	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7 8
			Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7 8



**The Start and End Time of a schedule cannot cross over into another day. For example, to program a shift from 10PM one day to 6AM the next morning, you must program Schedule A: Start Time 22:00 and End Time 23:59 then program Schedule B Start Time 00:00 and End Time 06:00. The schedule will not be interrupted between 23:59 and 00:00.**

## Backup Schedules

Each programmed schedule (see *Schedule Programming* on page 28) can be backed up or linked to another schedule. The backup will be used in the event that the first schedule is invalid. Enter the 3-digit number of the schedule you wish to use as the backup. *Ex: You wish to backup schedule 001 to schedule 011. In section [2501], you would enter 011.*

The control panel will verify up to 8 linked schedules, one after another, until it determines whether the card or code is valid. *Ex: If Schedule 001 is linked to Schedule 005 and Schedule 005 is linked to Schedule 030, then the control panel will verify Schedules 001, 005 and 030.*

Section		Section		Section		Section	
[2501]	___/___/___ Schedule 001	[2509]	___/___/___ Schedule 009	[2517]	___/___/___ Schedule 017	[2525]	___/___/___ Schedule 025
[2502]	___/___/___ Schedule 002	[2510]	___/___/___ Schedule 010	[2518]	___/___/___ Schedule 018	[2526]	___/___/___ Schedule 026
[2503]	___/___/___ Schedule 003	[2511]	___/___/___ Schedule 011	[2519]	___/___/___ Schedule 019	[2527]	___/___/___ Schedule 027
[2504]	___/___/___ Schedule 004	[2512]	___/___/___ Schedule 012	[2520]	___/___/___ Schedule 020	[2528]	___/___/___ Schedule 028
[2505]	___/___/___ Schedule 005	[2513]	___/___/___ Schedule 013	[2521]	___/___/___ Schedule 021	[2529]	___/___/___ Schedule 029
[2506]	___/___/___ Schedule 006	[2514]	___/___/___ Schedule 014	[2522]	___/___/___ Schedule 022	[2530]	___/___/___ Schedule 030
[2507]	___/___/___ Schedule 007	[2515]	___/___/___ Schedule 015	[2523]	___/___/___ Schedule 023	[2531]	___/___/___ Schedule 031
[2508]	___/___/___ Schedule 008	[2516]	___/___/___ Schedule 016	[2524]	___/___/___ Schedule 024	[2532]	___/___/___ Schedule 032

## Programming Access Levels

Each Access Level is a combination of Access Control doors. For example, if option [1] in the First Screen is enabled in section [2601], Level 01 will allow access only to Door 01.

Section	Level	Access to Doors (turn ON or OFF access):			
		First Screen Doors 01 to 08	Second Screen Doors 09 to 16	Third Screen Doors 17 to 24	Fourth Screen Doors 25 to 32
[2601]	01	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2602]	02	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2603]	03	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2604]	04	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2605]	05	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2606]	06	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2607]	07	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2608]	08	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2609]	09	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2610]	10	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2611]	11	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2612]	12	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2613]	13	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2614]	14	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8
[2615]	15	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8

## Holiday Programming

When [H] is enabled in a schedule (refer to page 29), access is permitted to users during the days programmed in the sections below.

Section	Month	Days			
		First Screen Days 01 to 08	Second Screen Days 09 to 16	Third Screen Days 17 to 24	Fourth Screen Days 25 to 31
[2701]	January	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2702]	February	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2703]	March	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2704]	April	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2705]	May	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2706]	June	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2707]	July	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2708]	August	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2709]	September	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2710]	October	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2711]	November	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *
[2712]	December	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 *

## Keypad Numbering

Sections **[2801]** to **[2832]** are used solely for the purpose of identifying a keypad in the event buffer. Enter the 8-digit serial number of the keypad you wish to label as keypad x (1 to 32). The event buffer will then display any events pertaining to a keypad as keypad 1 or keypad 2, etc.

Section	Keypad #	Serial Number	Section	Keypad #	Serial Number	Section	Keypad #	Serial Number
[2801]	Keypad 1	____/____/____/____/____/____/____/____	[2812]	Keypad 12	____/____/____/____/____/____/____/____	[2823]	Keypad 23	____/____/____/____/____/____/____/____
[2802]	Keypad 2	____/____/____/____/____/____/____/____	[2813]	Keypad 13	____/____/____/____/____/____/____/____	[2824]	Keypad 24	____/____/____/____/____/____/____/____
[2803]	Keypad 3	____/____/____/____/____/____/____/____	[2814]	Keypad 14	____/____/____/____/____/____/____/____	[2825]	Keypad 25	____/____/____/____/____/____/____/____
[2804]	Keypad 4	____/____/____/____/____/____/____/____	[2815]	Keypad 15	____/____/____/____/____/____/____/____	[2826]	Keypad 26	____/____/____/____/____/____/____/____
[2805]	Keypad 5	____/____/____/____/____/____/____/____	[2816]	Keypad 16	____/____/____/____/____/____/____/____	[2827]	Keypad 27	____/____/____/____/____/____/____/____
[2806]	Keypad 6	____/____/____/____/____/____/____/____	[2817]	Keypad 17	____/____/____/____/____/____/____/____	[2828]	Keypad 28	____/____/____/____/____/____/____/____
[2807]	Keypad 7	____/____/____/____/____/____/____/____	[2818]	Keypad 18	____/____/____/____/____/____/____/____	[2829]	Keypad 29	____/____/____/____/____/____/____/____
[2808]	Keypad 8	____/____/____/____/____/____/____/____	[2819]	Keypad 19	____/____/____/____/____/____/____/____	[2830]	Keypad 30	____/____/____/____/____/____/____/____
[2809]	Keypad 9	____/____/____/____/____/____/____/____	[2820]	Keypad 20	____/____/____/____/____/____/____/____	[2831]	Keypad 31	____/____/____/____/____/____/____/____
[2810]	Keypad 10	____/____/____/____/____/____/____/____	[2821]	Keypad 21	____/____/____/____/____/____/____/____	[2832]	Keypad 32	____/____/____/____/____/____/____/____
[2811]	Keypad 11	____/____/____/____/____/____/____/____	[2822]	Keypad 22	____/____/____/____/____/____/____/____			

## Control Panel Settings

[illegible]

## DAYLIGHT SAVINGS TIME SCHEDULE

Value	Schedule Used	Value	Schedule Used
000	Canada/United States/Mexico/St-Johns/Bahamas/Turks and Caicos	010	New-Zealand/Chatham
001	Cuba	011	Tonga
002	Brazil	012	Iraq/Syria
003	Chile	013	Israel (TBC)
004	Falkland Islands	014	Lebanon/Kyrgyzstan
005	Paraguay	015	Palestine
006	European Union/United Kingdom/Greenland	016	Egypt
007	Russia and surrounding countries	017	Namibia
008	South Australia/Victoria/Australian Capital Territory/New South Wales	018	United States starting 2007 (TBC)
009	Tasmania/Lord Howe Island		


# System Options

△ = Default setting

## SECTION [3030] : System Options 1

Option	OFF	ON
[1] PGM 1 = 2-wire smoke detector input (255)	△ Disabled	1 Enabled
[2] No bell cut-off during pulse alarm	△ Disabled	1 Enabled
[3] Daylight saving time (see page 31)	1 Disabled	△ Enabled
[4] Shabbat feature	△ Disabled	1 Enabled
[5] Battery charge current	△ 350mA	1 850mA†
[6] AC failure not displayed as trouble	△ Disabled	1 Enabled
[7] Clear bell limit trouble	△ On restore	1 Manually
[8] Combustion Speed*	△ Normal	1 High

 \* Please note that when the Combustion Speed is changed, all operations on the system will be suspended for approximately 1 minute while the system adjust itself.

 † A 40VA transformer is required when selecting the 850mA battery charge current. Using a 20VA transformer with a battery charge current of 850mA may damage the system.

## SECTION [3031] : Partition Options 1

Option	OFF	ON
[1] Partition 1	1 Disabled	△ Enabled
[2] Partition 2	△ Disabled	1 Enabled
[3] Partition 3	△ Disabled	1 Enabled
[4] Partition 4	△ Disabled	1 Enabled
[5] Partition 5	△ Disabled	1 Enabled
[6] Partition 6	△ Disabled	1 Enabled
[7] Partition 7	△ Disabled	1 Enabled
[8] Partition 8	△ Disabled	1 Enabled

△ = Default setting

## SECTION [3032] : Partition Options 2

Option	OFF	ON
[1] Bell/siren output in partition 1	1 Disabled	△ Enabled
[2] Bell/siren output in partition 2	△ Disabled	1 Enabled
[3] Bell/siren output in partition 3	△ Disabled	1 Enabled
[4] Bell/siren output in partition 4	△ Disabled	1 Enabled
[5] Bell/siren output in partition 5	△ Disabled	1 Enabled
[6] Bell/siren output in partition 6	△ Disabled	1 Enabled
[7] Bell/siren output in partition 7	△ Disabled	1 Enabled
[8] Bell/siren output in partition 8	△ Disabled	1 Enabled

## SECTION [3033] : System Options 2

Option	OFF	ON
[1] Multiple actions in user menu	△ Disabled	1 Enabled
[2] User code length	△ Fixed	1 Flexible
[3] User code length (if option [2] OFF)	△ 4-digits	1 6-digits
[4] Power save mode	1 Disabled	△ Enabled
[5] Bypass not displayed while system is armed	1 Disabled	△ Enabled
[6] Trouble Latch	△ Disabled	1 Enabled
[7] EOL resistor on hardwire zones	△ Disabled	1 Enabled
[8] (ATZ) Zone Doubling	△ Disabled	1 Enabled

## SECTION [3034] : System Options 3

Option	OFF	ON
[1]&[2] Wireless Transmitter Supervision Options (see Table on page 33)	1 See Table 1 See Table	1 See Table 1 See Table
[3] Generate supervision failure if detected on a bypassed wireless zone	△ Yes	1 No
[4] Restrict arming on a wireless transmitter supervision failure	△ Disabled	1 Enabled
[5]&[6] Zone & Module Tamper Recognition Options (see Table on page 33)	1 See Table 1 See Table	1 See Table 1 See Table
[7] Generate tamper if detected on bypass zone	1 Yes	△ No
[8] Restrict arming on tamper trouble	△ Disabled	1 Enabled

## SECTION [3035] : System Options 4

Option	OFF	ON
[1] Restrict arming on AC failure	△ Disabled	1 Enabled
[2] Restrict arming on battery failure	△ Disabled	1 Enabled
[3] Restrict arming on bell or auxiliary failure	△ Disabled	1 Enabled
[4] Restrict arming on TLM failure	△ Disabled	1 Enabled
[5] Restrict arming on module troubles	△ Disabled	1 Enabled
[6] Account Number Transmission	△ Partition #	1 Tel #
[7] Transmit zone status on serial port*	△ Disabled	1 Enabled
[8] Serial Port Baud Rate	△ 38,400	1 57,600

\*This option is used by some event monitoring software such as Hyperterminal. With WinLoad and printers, it is always being transmitted,



Wireless Transmitter Supervision Options (Section [3034]: options [1] & [2])		
[1]	[2]	
OFF	OFF	- Disabled (default)
OFF	ON	- GENERATES TROUBLE ONLY (WHEN ARMED OR DISARMED)
ON	OFF	- When disarmed: GENERATES TROUBLE ONLY - When armed: Follows Zone Alarm Types (page 9)
ON	ON	- When disarmed: GENERATES AUDIBLE ALARM - When armed: Follows Zone Alarm Types (page 9)

Zone & Module Tamper Recognition Options (Section [3034]: options [5] & [6])		
[5]	[6]	
OFF	OFF	- Disabled (default)
OFF	ON	- GENERATES TROUBLE ONLY (WHEN ARMED OR DISARMED)
ON	OFF	- When disarmed: GENERATES TROUBLE ONLY - When armed: Follows Zone Alarm Types (page 9) for Zone Tamper. Generates Trouble for Module Tamper.
ON	ON	- When disarmed: GENERATES AUDIBLE ALARM - When armed: Follows Zone Alarm Types (page 9)

## Dialer Options

△ = Default setting

### SECTION [3036]: Dialer Options 1

Option	OFF	ON
[1]&[2] Telephone Line Monitoring (TLM) - (see table below)	1 See Table 1 See Table	1 See Table 1 See Table
[3] Dialer (reporting to monitoring station)	△ Disabled	1 Enabled
[4] Dialing method	1 Pulse	△ Tone (DTMF)
[5] Pulse ratio (E.U. = Europe; N.A. = North America)	1 1:2 (E.U.)	△ 1:1.5 (N.A.)
[6] Busy tone detection	1 Disabled	△ Enabled
[7] Switch to pulse dialing on 5 <sup>th</sup> attempt	△ Disabled	1 Enabled
[8] Bell/siren upon communication failure if system is armed	△ Disabled	1 Enabled

### SECTION [3037] : Dialer Options 2

Option	OFF	ON
[1] Call back	△ Disabled	1 Enabled
[2] Automatic event buffer transmission	△ Disabled	1 Enabled
[3]&[4] Auto Test Report Transmission Options (see Auto Test Report Settings on page 33)	1 See Table 1 See Table	1 See Table 1 See Table
[5] Keypad beep on successful arming/ disarming report	△ Disabled	1 Enabled
[6] Alternate Dialing	△ Disabled	1 Enabled
[7] Dial Tone Delay (if no dial tone)	△ Force dial	1 Hang-up
[8] Report zone restore ON = On zone closure; OFF = On bell cut-off	△ Disabled	1 Enabled

Telephone Line Monitoring (TLM) Options (Section [3036]: options [1] & [2])		
[1]	[2]	
OFF	OFF	Disabled (default)
OFF	ON	When armed: GENERATES AN AUDIBLE ALARM
ON	OFF	When armed: GENERATES A TROUBLE
ON	ON	TLM silent alarm: BECOMES AN AUDIBLE ALARM

Auto-Test Report Transmission Options (Section [3037]: options [3] & [4])		
[3]	[4]	
OFF	OFF	Transmit the test report code every time the days programmed in section [3040] have elapsed at the time programmed in section [3041] (default).
OFF	ON	<b>When disarmed:</b> Transmit test report code every time the time programmed in section [3043] has elapsed. <b>When armed:</b> Transmit test report code every time the time programmed in section [3042] has elapsed.
ON	OFF	The control panel will transmit the test report code every hour on the minute value programmed in section [3041] (the last two digits). Note that the first two digits of section [3041] will be ignored. <i>For example, if 10:25 was programmed into section [3041], the test report code would be transmitted at the 25<sup>th</sup> minute of every hour, i.e. 11:25, 12:25, etc.</i>
ON	ON	The test report code will be transmitted when any of the conditions of the second and third options listed above (options [3] = OFF and [4] = ON / options [3] = ON and [4] = OFF) are met.

# Other Options

△ = Default setting

## SECTION [3038]: Access Control Options

Option		OFF	ON
[1]	Access control feature	△ Disabled	1 Enabled
[2]	Log "Request for Exit" in event buffer*	△ Disabled	1 Enabled
[3]	Log "Door Left Open Restore" in event buffer	△ Disabled	1 Enabled
[4]	Log "Door Forced Restore" in event buffer	△ Disabled	1 Enabled
[5]	Burglar alarm on forced door	△ Disabled	1 Enabled
[6]	Skip exit delay when arming with access card	△ Disabled	1 Enabled
[7]	Burglar alarm on door left open	△ Disabled	1 Enabled
[8]	Who has access during clock loss	△ All users	1 Masters*



\* Since "Request for Exit" events can occur often, the Event Buffer may fill up quickly.

\* This also includes users with 00 for schedule access.

## Schedule Tolerance Window

Section	Data	Description	Default
[3039]	__/__/__ ( x 1 minute)	SCHEDULE TOLERANCE WINDOW	000

## Auto Test Report Settings

Section	Data	Description	Default
[3040]	__/__/__ ( x 1 day; 000 = disabled)	AUTO TEST REPORT	000
[3041]	__/:__ Hrs (00-23) & Mins (00-59)	AUTO TEST REPORT TIME OF DAY	00 : 00
[3042]	__/__/__ (000 - 255 x 1 minute)	ARMED REPORT DELAY	5 minutes
[3043]	__/__/__ (000 - 255 x 1 minute)	DISARMED REPORT DELAY	60 minutes

## Timings

Section	Data	Description	Default
[3051]	__/__/__ (000 - 255)	RING COUNTER	008
[3052]	__/__/__ (000 - 255 x 4 seconds)	ANSWERING MACHINE OVERRIDE DELAY	32 seconds
[3053]	__/__/__ (000 - 255 x 2 seconds)	TLM FAIL TIMER	32 seconds
[3054]	__/__/__ (000 - 127 x 1 second)	DELAY BETWEEN DIALING ATTEMPTS	20 seconds
[3055]	__/__/__ (000 - 255 x 1 second; 000 = Instant Report)	DELAY ALARM TRANSMISSION TIMER	000
[3056]	__/__/__ (000 - 255 x 1 attempt)	MAXIMUM DIALING ATTEMPTS	8 attempts
[3057]	__/__/__ (000 - 127 x 1 second)	PAGER DELAY BEFORE DATA TRANSMISSION	20 seconds
[3058]	__/__/__ (000 - 255 x 1 minute; 000 = Instant Report)	DELAY POWER FAILURE REPORT	30 minutes
[3059]	__/__/__ (000 - 255 x 1 repeat; 000 = No Repeat)	REPEAT PAGER REPORT CODE TRANSMISSION	000
[3060]	__/__/__ (000 - 255 x 1 minute)	POWER FAILURE RESTORE DELAY REPORT	030 minutes



Special Telephone Number Keys					
Function	LCD	Grafica	Function	LCD	Grafica
*	[STAY]	[#] (press key until desired letter/symbol appears)	Clear	[CLEAR]	Left action key (Clear)
#	[FORCE]		Delete	[TRBL]	—
Switch to Tone Dialing (T)	[ARM]		Delete from cursor to the end	[ACC]	—
Wait for second dial tone (W)	[DISARM]		Insert space	[MEM]	—
4-second pause (P)	[BYP]				

## System Event Call Direction

△ = Default setting

### SECTION [3080]: System Troubles & Trouble Restores

Option	OFF	ON
[1] Call Telephone #1	1 Disabled	△ Enabled
[2] Call Telephone #2	△ Disabled	1 Enabled
[3] Call Telephone #3	△ Disabled	1 Enabled
[4] Call Telephone #4	△ Disabled	1 Enabled
[5] Backup on Telephone #1	△ Disabled	1 Enabled
[6] Backup on Telephone #2	△ Disabled	1 Enabled
[7] Backup on Telephone #3	△ Disabled	1 Enabled
[8] Backup on Telephone #4	△ Disabled	1 Enabled

→ ENABLE ONLY ONE

### SECTION [3081]: Special Reporting

Option	OFF	ON
[1] Call Telephone #1	1 Disabled	△ Enabled
[2] Call Telephone #2	△ Disabled	1 Enabled
[3] Call Telephone #3	△ Disabled	1 Enabled
[4] Call Telephone #4	△ Disabled	1 Enabled
[5] Backup on Telephone #1	△ Disabled	1 Enabled
[6] Backup on Telephone #2	△ Disabled	1 Enabled
[7] Backup on Telephone #3	△ Disabled	1 Enabled
[8] Backup on Telephone #4	△ Disabled	1 Enabled

→ ENABLE ONLY ONE

# Partition Settings

Section Partition Label  
 [3100] \_\_\_\_\_ Partition 1  
 [3200] \_\_\_\_\_ Partition 2  
 [3300] \_\_\_\_\_ Partition 3  
 [3400] \_\_\_\_\_ Partition 4

Section Partition Label  
 [3500] \_\_\_\_\_ Partition 5  
 [3600] \_\_\_\_\_ Partition 6  
 [3700] \_\_\_\_\_ Partition 7  
 [3800] \_\_\_\_\_ Partition 8

## Auto-Arm Times

SECTION [3101]: Partition 1	SECTION [3201]: Partition 2	SECTION [3301]: Partition 3	SECTION [3401]: Partition 4
Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____
SECTION [3501]: Partition 5	SECTION [3601]: Partition 6	SECTION [3701]: Partition 7	SECTION [3801]: Partition 8
Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____	Hours (00-23) & Minutes (00-59) ____ : ____

## Arming Report Schedules (If partition is armed outside schedule, the panel will send an Early to Close [3916] and/or Late to Close [3917] report code; see page 43)

Section	Schedule	Intervals	Start Time (from)	End Time (to)	Days (turn ON or OFF)							
					S	M	T	W	T	F	S	H
[3102] Partition 1	001	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3202] Partition 2	002	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3302] Partition 3	003	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3402] Partition 4	004	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3502] Partition 5	005	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3602] Partition 6	006	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3702] Partition 7	007	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3802] Partition 8	008	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8

## Disarming Report Schedules (If partition is disarmed outside schedule, the panel will send an Early to Open [3926] and/or Late to Open [3927] report code; see page 43)

Section	Schedule	Intervals	Start Time (from)	End Time (to)	Days (turn ON or OFF)							
					S	M	T	W	T	F	S	H
[3103] Partition 1	001	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3203] Partition 2	002	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3303] Partition 3	003	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3403] Partition 4	004	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3503] Partition 5	005	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3603] Partition 6	006	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3703] Partition 7	007	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3803] Partition 8	008	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
		Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8

## Partition Timers

Description Decimal Values from 000 to 255	Partition 1		Partition 2		Partition 3		Partition 4		Partition 5		Partition 6		Partition 7		Partition 8	
	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data
Arming/Disarming Schedule Tolerance Window (Data x 1 minute; Default = 000)	[3104]	___/___	[3204]	___/___	[3304]	___/___	[3404]	___/___	[3504]	___/___	[3604]	___/___	[3704]	___/___	[3804]	___/___
# of Invalid Codes Before Lockout (Data x 1 attempt; Default = Disabled)	[3105]	___/___	[3205]	___/___	[3305]	___/___	[3405]	___/___	[3505]	___/___	[3605]	___/___	[3705]	___/___	[3805]	___/___
Keypad Lockout Duration (Data x 1 minute; Default = Report Only)	[3106]	___/___	[3206]	___/___	[3306]	___/___	[3406]	___/___	[3506]	___/___	[3606]	___/___	[3706]	___/___	[3806]	___/___
No Movement Timer (Data x 5 minutes; Default = Disabled)	[3107]	___/___	[3207]	___/___	[3307]	___/___	[3407]	___/___	[3507]	___/___	[3607]	___/___	[3707]	___/___	[3807]	___/___
Exit Delay Timer (Data x 1 second; Default = 060 seconds)	[3108]	___/___	[3208]	___/___	[3308]	___/___	[3408]	___/___	[3508]	___/___	[3608]	___/___	[3708]	___/___	[3808]	___/___
Recent Closing Delay (Data x 1 second; Default = Disabled)	[3109]	___/___	[3209]	___/___	[3309]	___/___	[3409]	___/___	[3509]	___/___	[3609]	___/___	[3709]	___/___	[3809]	___/___
Intellizone Delay (Data x 1 second; Default = 032 seconds)	[3110]	___/___	[3210]	___/___	[3310]	___/___	[3410]	___/___	[3510]	___/___	[3610]	___/___	[3710]	___/___	[3810]	___/___
Entry Delay 1 (Data x 1 second; Default = 030 seconds)	[3111]	___/___	[3211]	___/___	[3311]	___/___	[3411]	___/___	[3511]	___/___	[3611]	___/___	[3711]	___/___	[3811]	___/___
Entry Delay 2 (Data x 1 second; Default = 060 seconds)	[3112]	___/___	[3212]	___/___	[3312]	___/___	[3412]	___/___	[3512]	___/___	[3612]	___/___	[3712]	___/___	[3812]	___/___
Bell Cut-off Timer (Data x 1 minute; Default = 4 minutes)	[3113]	___/___	[3213]	___/___	[3313]	___/___	[3413]	___/___	[3513]	___/___	[3613]	___/___	[3713]	___/___	[3813]	___/___
Auto Zone Shutdown (000 to 015 alarms; Default = Disabled)	[3114]	___/___	[3214]	___/___	[3314]	___/___	[3414]	___/___	[3514]	___/___	[3614]	___/___	[3714]	___/___	[3814]	___/___
Max. # of Zones that can be Bypassed (Data x 1 zone; Default = unlimited)	[3115]	___/___	[3215]	___/___	[3315]	___/___	[3415]	___/___	[3515]	___/___	[3615]	___/___	[3715]	___/___	[3815]	___/___
Recycle Delay (Data x 1 minute; Default = Disabled)	[3116]	___/___	[3216]	___/___	[3316]	___/___	[3416]	___/___	[3516]	___/___	[3616]	___/___	[3716]	___/___	[3816]	___/___
Number of Recycles (Data x 1 attempt; Default = unlimited)	[3117]	___/___	[3217]	___/___	[3317]	___/___	[3417]	___/___	[3517]	___/___	[3617]	___/___	[3717]	___/___	[3817]	___/___
Police Code Timer (Data x 1 minute; Default = Disabled)	[3118]	___/___	[3218]	___/___	[3318]	___/___	[3418]	___/___	[3518]	___/___	[3618]	___/___	[3718]	___/___	[3818]	___/___
Closing Delinquency Timer (Data x 1 day; Default = Disabled)	[3119]	___/___	[3219]	___/___	[3319]	___/___	[3419]	___/___	[3519]	___/___	[3619]	___/___	[3719]	___/___	[3819]	___/___
Postpone auto-arm delay (Data x 15 minute Default = 0 )	[3120]	___/___	[3220]	___/___	[3320]	___/___	[3420]	___/___	[3520]	___/___	[3620]	___/___	[3720]	___/___	[3820]	___/___

## Partition Options 1

SECTION [3121] : Partition 1				SECTION [3221] : Partition 2				SECTION [3321] : Partition 3			
Option	(△ = Default Setting)	OFF Disabled	ON Enabled	Option	(△ = Default Setting)	OFF Disabled	ON Enabled	Option	(△ = Default Setting)	OFF Disabled	ON Enabled
[1] Switch to Stay Arm (if no Delay zone opened)	△		1	[1] Arm/Disarm with Partition 1	△		1	[1] Arm/Disarm with Partition 1	△		1
[2] Arm/Disarm with Partition 2	△		1	[2] Switch to Stay Arm (if no Delay zone opened)	△		1	[2] Arm/Disarm with Partition 2	△		1
[3] Arm/Disarm with Partition 3	△		1	[3] Arm/Disarm with Partition 3	△		1	[3] Switch to Stay Arm (if no Delay zone opened)	△		1
[4] Arm/Disarm with Partition 4	△		1	[4] Arm/Disarm with Partition 4	△		1	[4] Arm/Disarm with Partition 4	△		1
[5] Arm/Disarm with Partition 5	△		1	[5] Arm/Disarm with Partition 5	△		1	[5] Arm/Disarm with Partition 5	△		1
[6] Arm/Disarm with Partition 6	△		1	[6] Arm/Disarm with Partition 6	△		1	[6] Arm/Disarm with Partition 6	△		1
[7] Arm/Disarm with Partition 7	△		1	[7] Arm/Disarm with Partition 7	△		1	[7] Arm/Disarm with Partition 7	△		1
[8] Arm/Disarm with Partition 8	△		1	[8] Arm/Disarm with Partition 8	△		1	[8] Arm/Disarm with Partition 8	△		1

## SECTION [3621] : Partition 6

Option	(△ = Default Setting)	OFF	ON
		Disabled	Enabled
[1]	Arm/Disarm with Partition 1	△	1
[2]	Arm/Disarm with Partition 2	△	1
[3]	Arm/Disarm with Partition 3	△	1
[4]	Arm/Disarm with Partition 4	△	1
[5]	Arm/Disarm with Partition 5	△	1
[6]	Switch to Stay Arm (if no Delay zone opened)	△	1
[7]	Arm/Disarm with Partition 7	△	1
[8]	Arm/Disarm with Partition 8	△	1

Option	$(\triangle = \text{Default Setting})$	OFF	ON
		Disabled	Enabled
[1]	Arm/Disarm with Partition 1	$\triangle$	1
[2]	Arm/Disarm with Partition 2	$\triangle$	1
[3]	Arm/Disarm with Partition 3	$\triangle$	1
[4]	Arm/Disarm with Partition 4	$\triangle$	1
[5]	Arm/Disarm with Partition 5	$\triangle$	1
[6]	Arm/Disarm with Partition 6	$\triangle$	1
[7]	Arm/Disarm with Partition 7	$\triangle$	1
[8]	Switch to Stay Arm (if no Delay zone opened)	$\triangle$	1

[illegible]

## Partition Panic Alarm Options

Option (△ = Default Setting)	Partition 1 [3123]		Partition 2 [3223]		Partition 3 [3323]		Partition 4 [3423]		Partition 5 [3523]		Partition 6 [3623]		Partition 7 [3723]		Partition 8 [3823]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>Panic 1 (Keys 1 &amp; 3)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[2] <i>Panic 2 (Keys 4 &amp; 6)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>Panic 3 (Keys 7 &amp; 9)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>Panic 1 Alarm Type (OFF = Report Only; ON = Audible Alarm)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>Panic 2 Alarm Type (OFF = Report Only; ON = Audible Alarm)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>Panic 3 Alarm Type (OFF = Report Only; ON = Fire Alarm)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[7] <i>Always Report Disarming (OFF = Always; ON = Only After Alarm)</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8] <i>Auto-Force on Regular Arming</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1

## Partition Bell Squawk Options

Option (△ = Default Setting)	Partition 1 [3124]		Partition 2 [3224]		Partition 3 [3324]		Partition 4 [3424]		Partition 5 [3524]		Partition 6 [3624]		Partition 7 [3724]		Partition 8 [3824]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>Bell Squawk upon Disarming</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[2] <i>Bell Squawk upon Arming</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>Bell Squawk upon Auto-arming</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>Bell Squawk during Exit Delay</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>Bell Squawk during Entry Delay</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>Bell Squawk upon Remote Arming/Disarming</i>	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△
[7] <i>Ring Back: Bell Squawk if Disarmed after Alarm</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8] <i>Ring Back: Keypad beeps if Disarmed after Alarm</i>	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△

## Partition One-Touch Options

Option (△ = Default Setting)	Partition 1 [3125]		Partition 2 [3225]		Partition 3 [3325]		Partition 4 [3425]		Partition 5 [3525]		Partition 6 [3625]		Partition 7 [3725]		Partition 8 [3825]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>One-touch Regular Arming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[2] <i>One-touch Stay Arming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>One-touch Instant Arming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>One-touch Force Arming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>One-touch Stay or Instant Disarming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>One-touch Bypass Programming*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[7] <i>One-touch Event Display*</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8] <i>No Exit Delay when Arming with remote control</i>	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△



\* If a keypad is assigned to more than one partition, the one-touch feature must be enabled in all the keypad's assigned partitions. Example: To enable the one-touch Regular Arming feature of a keypad assigned to partitions 1, 2 and 5, enable sections [3125] option [1], [3225] option [1] and [3525] option [1].



## Partition Special Options

Option (△ = Default Setting)	Partition 1 [3126]		Partition 2 [3226]		Partition 3 [3326]		Partition 4 [3426]		Partition 5 [3526]		Partition 6 [3626]		Partition 7 [3726]		Partition 8 [3826]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>Intellizone Delay</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[2] <i>Intellizone Double Knockout and Zone Crossing</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>Intellizone Zone Crossing</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>Auto Force on Stay Arming</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>Police Code is Generated on Zone Crossing Only</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>Future Use</i>	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
[7] <i>Future Use</i>	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
[8] <i>Future Use</i>	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

## Partition Arming / Disarming Event Call Direction

Option (△ = Default Setting)	Partition 1 [3127]		Partition 2 [3227]		Partition 3 [3327]		Partition 4 [3427]		Partition 5 [3527]		Partition 6 [3627]		Partition 7 [3727]		Partition 8 [3827]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>Call Telephone Number 1</i>	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△
[2] <i>Call Telephone Number 2</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>Call Telephone Number 3</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>Call Telephone Number 4</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>Backup on Telephone Number 1</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>Backup on Telephone Number 2</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[7] <i>Backup on Telephone Number 3</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8] <i>Backup on Telephone Number 4</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1

→ ENABLE ONLY ONE

## Partition Alarm / Alarm Restore Event Call Direction

Option (△ = Default Setting)	Partition 1 [3128]		Partition 2 [3228]		Partition 3 [3328]		Partition 4 [3428]		Partition 5 [3528]		Partition 6 [3628]		Partition 7 [3728]		Partition 8 [3828]	
	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1] <i>Call Telephone Number 1</i>	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△
[2] <i>Call Telephone Number 2</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3] <i>Call Telephone Number 3</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4] <i>Call Telephone Number 4</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5] <i>Backup on Telephone Number 1</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6] <i>Backup on Telephone Number 2</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[7] <i>Backup on Telephone Number 3</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8] <i>Backup on Telephone Number 4</i>	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1

→ ENABLE ONLY ONE

## Partition Tamper / Tamper Restore Event Call Direction

Option	(△ = Default Setting)	Partition 1 [3129]		Partition 2 [3229]		Partition 3 [3329]		Partition 4 [3429]		Partition 5 [3529]		Partition 6 [3629]		Partition 7 [3729]		Partition 8 [3829]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
[1]	Call Telephone Number 1	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△
[2]	Call Telephone Number 2	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[3]	Call Telephone Number 3	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[4]	Call Telephone Number 4	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[5]	Backup on Telephone Number 1	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[6]	Backup on Telephone Number 2	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[7]	Backup on Telephone Number 3	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1
[8]	Backup on Telephone Number 4	△	1	△	1	△	1	△	1	△	1	△	1	△	1	△	1

→ ENABLE ONLY ONE

## Special Arming Exit Delay

Description	Partition 1		Partition 2		Partition 3		Partition 4		Partition 5		Partition 6		Partition 7		Partition 8	
Decimal Values from 000 to 255 Exit delay for special arming. (Auto arm, WinLoad/NEWare arming etc.) (Data x second; Default = 060)	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data	Section	Data
	[3130]	___/___/___	[3230]	___/___/___	[3330]	___/___/___	[3430]	___/___/___	[3530]	___/___/___	[3630]	___/___/___	[3730]	___/___/___	[3830]	___/___/___

## No Movement Schedule

Section	Intervals	Start Time (from)	End Time (to)	Days (turn ON or OFF)							
				S	M	T	W	T	F	S	H
[3131] Partition 1	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3231] Partition 2	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3331] Partition 3	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3431] Partition 4	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3531] Partition 5	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3631] Partition 6	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3731] Partition 7	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8
[3831] Partition 8	Schedule A	____ : ____	____ : ____	1	2	3	4	5	6	7	8
	Schedule B	____ : ____	____ : ____	1	2	3	4	5	6	7	8



The Start and End Time of a schedule cannot cross over into another day. For example, to program a shift from 10PM one day to 6AM the next morning, you must program Schedule A: Start Time 22:00 and End Time 23:59 then program Schedule B Start Time 00:00 and End Time 06:00. The schedule will not be interrupted between 23:59 and 00:00.

# Special and Trouble Report Codes

**Ademco slow, Silent Knight fast, SESCOA, Ademco express or Pager formats:** Key-in desired 2-digit hex values from 00 to FF.

## Ademco format:

Use sections **[4034]** (Special System Report Codes), **[4035]** (Special Arming/Disarming Report Codes), **[4036]** (Special Alarm Report Codes) and **[4037]** (Trouble/Trouble Restore Report Codes) to program a set of default Ademco report codes from the *Automatic Report Code Programming* on page 45. Then to program the remaining report codes or to change some of the defaults, enter the individual sections and key-in the desired 2-digit hex value found in the *Contact ID Report Code List* on page 48.

## SIA format:

Use sections **[4034]** (Special System Report Codes), **[4035]** (Special Arming/Disarming Report Codes), **[4036]** (Special Alarm Report Codes) and **[4037]** (Trouble/Trouble Restore Report Codes) to program a set of SIA report codes from the *Automatic Report Code Programming* on page 45. Codes that have not been set to default can be set to default manually by entering FF in the appropriate section. To disable the reporting of an event, enter 00 in the appropriate section.

## Special System Report Codes

Section	Report Code
<b>[3900]</b>	___ Power up after total power down
<b>[3901]</b>	___ Software reset (Watchdog)
<b>[3902]</b>	___ Test Report
<b>[3903]</b>	___ Listen-In to Follow (Request to start session)
<b>[3904]</b>	___ WinLoad Login Request (Callback only)
<b>[3905]</b>	___ WinLoad Log Off
<b>[3906]</b>	___ Installer In
<b>[3907]</b>	___ Installer Out
<b>[3908]</b>	Future Use
<b>[3909]</b>	Future Use

## Special Alarm Report Codes

Section	Report Code
<b>[3930]</b>	___ Emergency Panic
<b>[3931]</b>	___ Auxiliary Panic
<b>[3932]</b>	___ Fire Panic
<b>[3933]</b>	___ Recent Closing
<b>[3934]</b>	___ Police Code
<b>[3935]</b>	___ Zone Shutdown
<b>[3936]</b>	___ Duress
<b>[3937]</b>	___ Keypad Lockout
<b>[3938]</b>	Future Use
<b>[3939]</b>	Future Use

## Special Arming Report Codes

Section	Report Code
<b>[3910]</b>	___ Auto-arming
<b>[3911]</b>	___ PC Arming
<b>[3912]</b>	___ Late to Close (Auto-arming)
<b>[3913]</b>	___ No Movement
<b>[3914]</b>	___ Partial Arming
<b>[3915]</b>	___ Quick Arming
<b>[3916]</b>	___ Early to Close (refer to "Arming Report Schedules" on page 37)
<b>[3917]</b>	___ Late to Close (refer to "Arming Report Schedules" on page 37)
<b>[3918]</b>	___ Remote Arming (APR3-ADM2, DGP-LSN4)
<b>[3919]</b>	___ Closing Delinquency

## Trouble Report Codes

Section	Report Code
<b>[3940]</b>	Future Use
<b>[3941]</b>	___ AC Failure
<b>[3942]</b>	___ Battery Failure
<b>[3943]</b>	___ Auxiliary Supply
<b>[3944]</b>	___ Bell Output (Disconnected or overload)
<b>[3945]</b>	___ Clock Loss
<b>[3946]</b>	___ Fire Loop Trouble
<b>[3947]</b>	Future Use
<b>[3948]</b>	Future Use
<b>[3949]</b>	Future Use
<b>[3950]</b>	___ Combustion Fault
<b>[3951]</b>	___ Module Tamper
<b>[3952]</b>	___ ROM Check Error
<b>[3953]</b>	___ Module TLM
<b>[3954]</b>	___ Module Failure to Communicate
<b>[3955]</b>	___ Printer Fault
<b>[3956]</b>	___ Module AC Failure
<b>[3957]</b>	___ Module Battery Failure
<b>[3958]</b>	___ Module Auxiliary Failure
<b>[3959]</b>	Future Use
<b>[3960]</b>	___ Wireless Transmitter Battery Low
<b>[3961]</b>	___ Wireless Transmitter Supervision Trouble
<b>[3962]</b>	Future Use
<b>[3963]</b>	Future Use
<b>[3964]</b>	Future Use
<b>[3965]</b>	___ Phone Number 1 Fail to Communicate

## Special Disarming Report Codes

Section	Report Code
<b>[3920]</b>	___ Cancel Auto-arm
<b>[3921]</b>	___ Quick Disarm
<b>[3922]</b>	___ PC Disarming
<b>[3923]</b>	___ PC Disarming after alarm
<b>[3924]</b>	___ Cancel Alarm
<b>[3925]</b>	Future Use
<b>[3926]</b>	___ Early to Open (refer to "Disarming Report Schedules" on page 38)
<b>[3927]</b>	___ Late to Open (refer to "Disarming Report Schedules" on page 38)
<b>[3928]</b>	___ Remote Disarming (APR3-ADM2, DGP-LSN4)
<b>[3929]</b>	Future Use

[3966] \_\_\_/\_\_\_ Phone Number 2 Fail to Communicate  
 [3967] \_\_\_/\_\_\_ Phone Number 3 Fail to Communicate  
 [3968] \_\_\_/\_\_\_ Phone Number 4 Fail to Communicate  
 [3969] Future Use

[3978] Future Use  
 [3979] Future Use  
 [3980] \_\_\_/\_\_\_ Combustion Fault Restore  
 [3981] \_\_\_/\_\_\_ Module Tamper Restore  
 [3982] \_\_\_/\_\_\_ ROM Check Error Restore  
 [3983] \_\_\_/\_\_\_ Module TLM Restore  
 [3984] \_\_\_/\_\_\_ Module Failure to Communicate Restore  
 [3985] \_\_\_/\_\_\_ Printer Fault Restore  
 [3986] \_\_\_/\_\_\_ Module AC Failure Restore  
 [3987] \_\_\_/\_\_\_ Module Battery Failure Restore  
 [3988] \_\_\_/\_\_\_ Module Auxiliary Failure Restore  
 [3989] Future Use  
 [3990] \_\_\_/\_\_\_ Wireless Transmitter Battery Low Restore  
 [3991] \_\_\_/\_\_\_ Wireless Transmitter Supervision Trouble Restore

## Trouble Restore Report Codes

### Section Report Code

[3970] \_\_\_/\_\_\_ TLM1 Restore  
 [3971] \_\_\_/\_\_\_ AC Failure Restore  
 [3972] \_\_\_/\_\_\_ Battery Failure Restore  
 [3973] \_\_\_/\_\_\_ Auxiliary Supply Restore  
 [3974] \_\_\_/\_\_\_ Bell Output (Reconnected or Restored)  
 [3975] \_\_\_/\_\_\_ Clock Loss Restore  
 [3976] \_\_\_/\_\_\_ Fire Loop Trouble Restore  
 [3977] Future Use

## Other Settings and Modes

### Section


### Description

- [4000] **Display Serial Number of Control Panel and All Modules Connected to the combus:**  
 After entering section [4000], the keypad will display the 8-digit serial number of the control panel.  
*For LCD Keypads:* Use the [▲] and [▼] keys to scroll through the serial number of each module connected to the combus.  
*For Grafica Keypads:* Press the center action key (**Next**) to scroll through the serial number of each module on the combus.
- [4001] **Module Reset:**  
 Reset a module's programmed contents to default by entering its serial number.
- [4002] **Locate/Unlocate Module:**  
 Locate a specific module (e.g. detector, zone expander, etc.) connected to the combus by entering the module's serial number. The green "LOCATE" LED on the module will begin to flash until the serial number is re-entered or the appropriate "tamper" or "unlocate" switch on the module is pressed.
- [4003] **Module Programming Mode:**  
 Enter the serial number of the module you wish to program.
- [4004] **Module Broadcast:**  
 Copy the contents of all programming sections from one module to one or more modules of the same type. Enter the serial number of the source module, followed by the serial numbers of the modules you wish to program. To begin transferring data, press [ACC] on LCD keypads or the center action key (**Start**) on Grafica keypads.
- Label Broadcast:**  
 Copy user, door and partition labels from the control panel to all keypads and printer modules connected to the combus. To transmit the labels, in section [4004], enter the control panel's serial number. From the Destination screen, do not enter a serial number, but press [ACC] on LCD keypads or the center action key (**Start**) on Grafica keypads.
- PLEASE NOTE: The Module and Label Broadcast feature will only work when a module is broadcasting its data to a module or to modules of the same type and model number. For example, an APR-PRT1 (Printer Module) cannot broadcast to an APR3-PRT1. Likewise, a DGP module cannot broadcast to a DGP2 module.**
- [4005] **Remove Modules:**  
 After entering the section, the control panel will scan all modules connected to the combus. If any missing modules are detected (i.e. detector removed from the combus), the control panel will erase the module's serial number, removing the module from the control panel's memory.

## Paradox Memory Key (PMC-4)

- [4010] Download from the Memory Key to the control panel **except** sections [0001] to [0096] and [0501] to [0532]. (See warning on page 45)
- [4011] Download from the Memory Key to control panel **including** sections [0001] to [0096] and [0501] to [0532]. (See warning on page 45)
- [4012] Download user labels from the Memory Key to control panel. (See warning on page 45)
- [4013] Download installer default. (Use for reset from Memory key to control panel.)
- [4020] Copy the control panel sections to the Memory Key **except** sections [0001] to [0096] and [0501] to [0532]. (See warning on page 45)
- [4021] Copy the control panel sections to the Memory Key **including** sections [0001] to [0096] and [0501] to [0532]. (See warning on page 45)
- [4022] Copy the control panel user label to the Memory Key. (See warning on page 45)
- [4023] Copy the control panel installer default to the Memory key.

Jumper ON =  
Can copy and download contents

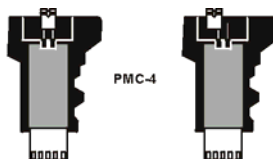


PMC-4

Jumper OFF =  
Cannot override the contents of  
the memory key.


### Download Memory Key to Control Panel.

- 1) Insert the Memory Key (PMC-4) onto the control panel's connector labelled "MEM KEY".
- 2) To download the contents of the *Memory Key* **except** sections [0001] to [0096] and [0501] to [0532], enter installer programming mode and then enter section [4010]. (Depending on the memory key, the labels may or may not be included.)  
To download the contents of the Memory Key **including** sections [0001] to [0096] and [0501] to [0532], enter installer programming mode and then enter section [4011]. (Depending on the memory key, the labels may or may not be included.)
- 3) When the keypad emits a confirmation beep, remove the Memory Key.

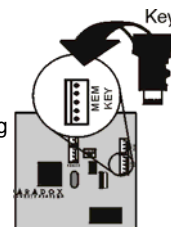

### Copy Control Panel to Memory Key

- 1) Insert Memory Key (PMC-4) onto the control panel's connector labelled "MEM KEY". Ensure the write protect jumper on the memory key is on.
- 2) To copy the contents to the Memory Key **except** sections [0001] to [0096] and [0501] to [0532], enter installer programming mode, then enter section [4020]. (Depending on the memory key, the labels may or may not be included.)  
To copy the contents to the Memory Key **including** sections [0001] to [0096] and [0501] to [0532], enter section [4021]. (Depending on the memory key, the labels may or may not be included.)
- 3) After the confirmation beep, remove the Memory Key. Remove the Memory Key's jumper if you do not wish to accidentally overwrite its contents.

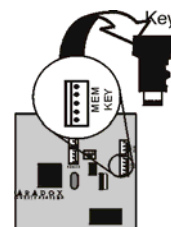

**When using the PMC-3 Memory Key, sections [4010], [4011], [4020] and [4021] will NOT include the labels. Use sections [4012] and [4022] to transfer labels only using a PMC-3.**

## Automatic Report Code Programming

When using Contact ID or SIA Reporting formats (section [3070] on page 36), default report codes can be programmed automatically. After automatic defaults are set, they can be changed and the remaining report codes can be set manually.

Section	Description
[4030] ALL REPORT CODES RESET TO 00	Resets all the report codes from sections [0201] to [0296], [0701] to [0832], [2001] to [2199] and [3900] to [3999] to 00.  Sections [4031] to [4037] reset all the report codes in the following sections to the default values from the "Automatic Report Codes List" on page 47.
[4031] ALL REPORT CODES RESET TO FF	[0201] to [0296], [0701] to [0832], [2001] to [2199] & [3900] to [3999]
[4032] ZONE ALARM/ALARM RESTORE AND ZONE TAMPER/TAMPER RESTORE REPORT CODES	[0201] to [0296]
[4033] USER/KEYSWITCH ARMING & DISARMING REPORT CODES	[0701] to [0832], and [2001] to [2199]
[4034] SPECIAL CODES	[3900] to [3909]
[4035] SPECIAL ARMING/DISARMING REPORT CODES	[3910] to [3929]
[4036] SPECIAL ALARM REPORT CODES	[3930] to [3939]
[4037] TROUBLE & TROUBLE RESTORE REPORT CODES	[3940] to [3999]

## Software Reset

Performing a software reset will set certain parameters to default values. To do so:

- 1) Enter Programming Mode (see page 1).
- 2) Enter Section [4049] to unlock software reset.
- 3) Enter the 4-digit [SECTION] corresponding to the software reset you wish to perform.
- 4) If you want to reset more than one section, enter section [4049] to unlock the software reset again.

Section	Description
[4040]	Entering this section will reset all programmable sections from [0001] to [3999] to factory default values.
[4041]	Entering this section will reset the system master code to 123456.
[4042]	Entering this section will reset all Zone (sections [0001] to [0196], [0201] to [0296], and sections [0961] to [0984]) programming to default values.
[4043]	Entering this section will reset all access control sections from [2201] to [2712], excluding door labels, to default values.
[4044]	Entering this section will reset all user code sections from [1001] to [1999] and [2001] to [2199] to default values.
[4045]	Entering this section will reset all dialer (sections [3051] to [3081]) and control panel (sections [3020] to [3043], and [3900] to [3991]) programming to default values.
[4046]	Entering this section will reset all partition sections from [3101] to [3831], excluding partition labels, to default values.
[4047]	Entering this section will reset all PGM (sections from [0901] to [0939]) and all Keyswitch (sections [0501] to [0632]) programming, as well as all Keyswitch arming/disarming report codes (sections from [0701] to [0832]) to default values.
[4048]	Entering this section will clear all user labels, door labels, partition labels, module labels and zone labels from sections [0301] to [0396].
[4049]	Entering this section will unlock software reset for sections [4040] to [4048].

## Installer Function Keys

To access the installer functions, press and hold the [0] key, enter the [INSTALLER CODE], and then:

**For LCD keypads:** press the key indicated in the list below that corresponds to the function you wish to activate.

**For Grafica keypads:** press the center action key (Options), highlight the desired function and then press the center action key (Ok).

[STAY]	<i>Test Report:</i> Sends the "Test Report" report code programmed in section [3902] to the monitoring station.
[FORCE]	<i>Call WinLoad Software:</i> Will dial the PC telephone number programmed in section [3010] in order to initiate communication with a computer using the WinLoad software.
[ARM]	<i>Answer WinLoad Software:</i> Will force the control panel to answer a call made by the Monitoring Station that is using the WinLoad software.
[DISARM]	<i>Cancel Communication:</i> Cancels all communication with the WinLoad software or with the Monitoring Station until the next reportable event.
[MEM]	<i>Installer Test Mode:</i> The installer test mode will allow you to perform walk tests where the bell or siren will squawk to indicate opened zones. Press the [MEM] button again to exit. Partitions cannot be armed if the Installer Test Mode is enabled.
[TRBL]	<i>Start Module Scan:</i> The keypad will display the serial number of each module on the combus.
[ACC]	<i>Combus Voltmeter:</i> To verify if the combus is supplying sufficient power, press and hold the [0] key, enter the [INSTALLER CODE] and press the [ACC] button. A reading of 12.3V or lower indicates that the voltage is too low. The voltage may drop during the control panel battery test.

## Automatic Report Code List

System Event	Default Contact ID Report Code when using sections [4032] to [4037]	Default SIA Report Code when using sections [4032] to [4037]
Arming with Master Code (##)	3 4A1 - Close by user	CL - Closing Report
Arming with User Code (##)	3 4A1 - Close by user	CL - Closing Report
Arming with Keyswitch (##)	3 4A9 - Keyswitch Close	CS - Closing Keyswitch
Auto Arming	3 4A3 - Automatic Close	CA - Automatic Closing
Arm with PC software	3 4A7 - Remote arm/disarm	CQ - Remote Arming
Late To Close	3 452 - Late to Close	OT - Late to Close
No Movement	3 452 - Late to Close	NA - No Mouvement Arming
Partial arming	1 456 - Partial Arm	CG - Close Area
Quick arming	3 4A8 - Quick arm	CL - Closing Report
Remote Arm (voice)	3 4A7 - Remote Arm	CQ - Arm with Voice Module
Delinquency Closing	1 654 - System Inactivity	CD - System Inactivity
Disarm with Master Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm with User Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm with Keyswitch (##)	1 4A9 - Keyswitch Open	OS - Opening Keyswitch
Disarm after alarm with Master Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm after alarm with User Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm after alarm with Keyswitch (##)	1 4A9 - Keyswitch Open	OS - Opening Keyswitch
Cancel alarm with Master Code (##)	1 4A6 - Cancel	OR - Disarm From Alarm
Cancel alarm with User Code (##)	1 4A6 - Cancel	OR - Disarm From Alarm
Cancel alarm with Keyswitch (##)	1 4A6 - Cancel	OS - Opening Keyswitch

<b>System Event</b>	<b>Default Contact ID Report Code when using sections [4032] to [4037]</b>	<b>Default SIA Report Code when using sections [4032] to [4037]</b>
Auto Arming Cancellation	1 464 - Auto-Arm Time Extended	CE - Closing Extend
Cancel Alarm with PC Software	1 4A6 - Cancel	OR - Disarm From Alarm
Voice Disarm	1 4A7 - Remote arm/disarm	OQ - Remote Disarming
Disarm with PC software	1 4A7 - Remote arm/disarm	OQ - Remote Disarming
Disarm after an alarm with PC software	1 4A7 - Remote arm/disarm	OQ - Remote Disarming
Quick Disarm	1 4A8 - Quick Disarm	OP - Opening Report
Zone Bypassed (##)	1 57A - Zone bypass	UB - Untyped Zone Bypass
Zone alarm (##)	1 13A - Burglary Alarm	BA - Burglary Alarm
Fire alarm (##)	1 11A - Fire alarm	FA - Fire Alarm
Early to Disarm by User	1 451 - Early to Open	OK - Early to Open
Late to Disarm by User	1 452 - Late to Open	OJ - Late to Open
Zone alarm restore (##)	3 13A - Burglary Alarm Restore	BH - Burglary Alarm Restore
Fire alarm restore (##)	3 11A - Fire alarm Restore	FH - Fire Alarm Restore
24Hr Gas alarm (##)	1 13A - Burglary Alarm	GA - Gas Alarm
24Hr Heat alarm (##)	1 13A - Burglary Alarm	KA - Heat Alarm
24Hr Water alarm (##)	1 13A - Burglary Alarm	WA - Water Alarm
24Hr Freeze alarm (##)	1 13A - Burglary Alarm	ZA - Freeze Alarm
24Hr Gas alarm restore (##)	3 13A - Burglary Alarm Restore	GR - Gas Alarm Restore
24Hr Heat alarm restore (##)	3 13A - Burglary Alarm Restore	KR - Heat Alarm Restore
24Hr Water alarm restore (##)	3 13A - Burglary Alarm Restore	WR - Water Alarm Restore
24Hr Freeze alarm restore (##)	3 13A - Burglary Alarm Restore	ZR - Freeze Alarm Restore
Panic 1 - Emergency	1 12A - Panic alarm	PA - Panic Alarm
Panic 2 - Medical	1 1AA - Medical alarm	MA - Medical Alarm
Panic 3 - Fire	1 115 - Pull Station	FA - Fire Alarm
Recent closing	3 459 - Recent Close	CR - Recent Closing
Police Code	1 139 - Burglary Alarm	BM - Burglary Alarm
Global zone shutdown	1 574 - Group bypass	CG - Close Area
Duress alarm	1 121 - Duress	HA - Hold-up Alarm
Zone shutdown (##)	1 57A - Zone bypass	UB - Untyped Zone Bypass
Zone tampered (##)	1 144 - Sensor tamper	TA - Tamper Alarm
Zone tamper restore (##)	3 144 - Sensor tamper restore	TR - Tamper Restoral
Keypad Lockout	1 421 - Access denied	JA - User Code Tamper
AC Failure	1 3A1 - AC loss	AT - AC Trouble
Battery Failure	1 3A9 - Battery test failure	YT - System Battery Trouble
Auxiliary supply trouble	1 3AA - System trouble	YP - Power Supply Trouble
Bell output current limit	1 321 - Bell 1	YA - Bell Fault
Bell absent	1 321 - Bell 1	YA - Bell Fault
Clock lost	1 626 - Time/Date inaccurate	JT - Time Changed
Fire loop trouble	1 373 - Fire trouble	FT - Fire Trouble
TLM trouble restore	3 351 - Telco 1 fault restore	LR - Phone Line restoral
AC Failure restore	3 3A1 - AC loss restore	AR - AC Restoral
Battery Failure restore	3 3A9 - Battery test restore	YR - System Battery Restoral
Auxiliary supply trouble restore	3 3AA - System trouble restore	YQ - Power Supply restored
Bell output current limit restore	3 321 - Bell 1 restore	YH - Bell Restored
Bell absent restore	3 321 - Bell 1 restore	YH - Bell Restored
Clock programmed	3 625 - Time/Date Reset	JT - Time Changed
Fire loop trouble restore	3 373 - Fire trouble restore	FJ - Fire Trouble Restore
Combus fault	1 333 - Expansion module failure	ET - Expansion Trouble
Module tamper	1 145 - Expansion module tamper	TA - Tamper Alarm
Module ROM_RAM_error	1 3A4 - Rom checksum bad	YF - Parameter Checksum Fail
Module TLM trouble	1 352 - Telco 2 fault	LT - Phone Line trouble
Module fail to communicate to monitoring station	1 354 - Fail to communicate	YC - Communication Fails
Printer fault	1 336 - Local printer failure	VT - Printer Trouble

System Event	Default Contact ID Report Code when using sections [4032] to [4037]	Default SIA Report Code when using sections [4032] to [4037]
Module AC Failure	1 3A1 - AC loss	AT - AC Trouble
Module battery failure	1 3A9 - Battery test failure	YT - System Battery Trouble
Module Auxiliary supply trouble	1 3AA - System trouble	YP - Power Supply Trouble
Combus fault restore	3 333 - Expansion module failure restore	ER - Expansion Restoral
Module tamper restore	3 145 - Expansion module tamper restore	TR - Tamper Restoral
Module ROM_RAM_error restore	3 3A4 - Rom checksum bad restore	YG - Parameter Changed
Module TLM restore	3 352 - Telco 2 fault restore	LR - Phone Line Restoral
Early to Arm by User	3 451 - Early to Close	CK - Early to Close
Late to Arm by User	3 452 - Late to Close	CJ - Late to Close
Zone Excluded on Force Arming	1 57A - Zone Bypass	XW - Zone Forced
Zone Went Back to Arm Status	3 57A - Zone Bypass Restore	VV - Zone Included
Printer fault restore	3 336 - Local printer failure restore	VR - Printer Restore
Module AC restore	3 3A1 - AC loss restore	AR - AC Restoral
Module battery restore	3 3A9 - Battery test failure restore	YR - System Battery Restoral
Module Auxiliary supply restore	3 3AA - System trouble restore	YQ - Power Supply Restored
Fail to communicate with monitoring station	1 354 - Fail to communicate	YC - Communication Fails
Module RF low battery	1 384 - RF transmitter low battery	XT - Transmitter Battery Trouble
Module RF supervision trouble	1 381 - Loss of supervision - RF	US - Untype Zone Supervision
Module RF battery restore	3 384 - RF transmitter battery restore	XR - Transmitter Battery Restoral
Module RF supervision restore	3 381 - Supervision restore - RF	UR - Untyped Zone Restoral
Cold Start	1 3A8 - System shutdown	RR - Power Up
Warm Start	1 3A5 - System reset	YW - Watchdog Reset
Test Report engaged	1 6A2 - Periodic test report	TX - Test Report
Listen-In request	1 606 - Listen-In to follow	LF - Listen-In to follow
WinLoad Login request	1 411 - Call Back Request	RB - Remote Program Begin
PC software communication finished	1 412 - Successful - download access	RS - Remote Program Success
Installer on site	1 627 - Program mode Entry	LB - Local Program
Installer programming finished	1 628 - Program mode Exit	LS - Local Program Success
Module Fail to Communicate Restore	3 354 - Fail to Communicate Restore	YK - Communication Restore

## Contact ID Report Code List

If using the Ademco Contact ID format, key in the 2-digit hexadecimal value (PROG. VALUE) to program the desired report codes into sections [0201] to [0296], [0701] to [0832], [2001] to [2199], and [3900] to [3999].

CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value
<b>MEDICAL ALARMS - 100</b>			<b>BURGLAR ALARMS - 130</b>			150	24-Hour Non-Burglary	25
100	Medical Alarm	01	130	Burglary	13	151	Gas Detected	26
101	Personal Emergency	02	131	Perimeter	14	152	Refrigeration	27
102	Fail to Report In	03	132	Interior	15	153	Loss of Heat	28
<b>FIRE ALARMS - 110</b>			133	24-Hour	16	154	Water Leakage	29
110	Fire Alarm	04	134	Entry/Exit	17	155	Foil Break	2A
111	Smoke	05	135	Day/Night	18	156	Day Trouble	2B
112	Combustion	06	136	Outdoor	19	157	Low Bottled Gas Level	2C
113	Water Flow	07	137	Tamper	1A	158	High Temperature	2D
114	Heat	08	138	Near Alarm	1B	159	Low Temperature	2E
115	Pull Station	09	139	Intrusion Verifier	1C	161	Loss of Air Flow	2F
116	Duct	0A	<b>GENERAL ALARMS - 140</b>			162	Carbon Monoxide Detected	30
117	Flame	0B	140	General Alarm	1D	163	Tank Level	31
118	Near Alarm	0C	141	Polling Loop Open	1E	<b>FIRE SUPERVISORY - 200 &amp; 210</b>		
<b>PANIC ALARMS - 120</b>			142	Polling Loop Short	1F	200	Fire Supervisory	32
120	Panic Alarm	0D	143	Expansion Module Failure	20	201	Low Water Pressure	33
121	Duress	0E	144	Sensor Tamper	21	202	Low CO2	34
122	Silent	0F	145	Expansion Module Tamper	22	203	Gate Valve Sensor	35
123	Audible	10	146	Silent Burglary	23	204	Low Water Level	36
124	Duress-Access Granted	11	147	Sensor Supervision Failure	24	205	Pump Activated	37
125	Duress-Egress Granted	12	<b>24-HOUR NON-BURGLARY - 150 &amp; 160</b>			206	Pump Failure	38




CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value
<b>SYSTEM TROUBLES - 300 &amp; 310</b>			378	Cross-Zone Trouble	6D	458	User on Premises	A1
300	System Trouble	39	<b>SENSOR TROUBLES - 380</b>			459	Recent Close	A2
301	AC Loss	3A	380	Sensor Trouble	6E	461	Wrong Code Entry	A3
302	Low System Battery	3B	381	Loss of Supervision - RF	6F	462	Legal Code Entry	A4
303	RAM Checksum Bad	3C	382	Loss of Supervision - RPM	70	463	Re-arm after Alarm	A5
304	ROM Checksum Bad	3D	383	Sensor Tamper	71	464	Auto-Arm Time Extended	A6
305	System Reset	3E	384	RF Transmitter Low Battery	72	465	Panic Alarm Reset	A7
306	Panel Program Changed	3F	385	Smoke Detector Hi Sensitivity	73	466	Service On/Off Premises	A8
307	Self-Test Failure	40	386	Smoke Detector Low Sensitivity	74	<b>SOUNDER RELAY DISABLES - 520</b>		
308	System Shutdown	41	387	Intrusion Detector Hi Sensitivity	75	520	Sounder/Relay Disabled	A9
309	Battery Test Failure	42	388	Intrusion Detector Low Sensitivity	76	521	Bell 1 Disable	AA
310	Ground Fault	43	389	Sensor Self-Test Failure	77	522	Bell 2 Disable	AB
311	Battery Missing/Dead	44	391	Sensor Watch Trouble	78	523	Alarm Relay Disable	AC
312	Power Supply Over Current	45	392	Drift Compensation Error	79	524	Trouble Relay Disable	AD
313	Engineer Reset	46	393	Maintenance Alert	7A	525	Reversing Relay Disable	AE
<b>SOUNDER/RELAY TROUBLES - 320</b>			<b>OPEN/CLOSE - 400</b>			526	Notification Appliance chk. #3 Disabled	AF
320	Sounder Relay	47	400	Open/Close	7B	527	Notification Appliance chk. #4 Disabled	B0
321	Bell 1	48	401	Open/Close by User	7C	531	Module Added	B1
322	Bell 2	49	402	Group Open/Close	7D	532	Module Removed	B2
323	Alarm Relay	4A	403	Automatic Open/Close	7E	<b>COMMUNICATION DISABLED - 550 &amp; 560</b>		
324	Trouble Relay	4B	406	Cancel	7F	551	Dialer Disabled	B3
325	Reversing Relay	4C	407	Remote Arm/Disarm	80	552	Radio Transmitter Disabled	B4
326	Notification Appliance chk. #3	4D	408	Quick Arm	81	<b>BYPASSES - 570</b>		
327	Notification Appliance chk. #4	4E	409	Keyswitch Open/Close	82	570	Zone Bypass	B5
<b>SYSTEM PERIPHERAL TROUBLES - 330 &amp; 340</b>			<b>REMOTE ACCESS - 410</b>			571	Fire Bypass	B6
330	System Peripheral	4F	411	Callback Request Made	83	572	24-Hour Zone Bypass	B7
331	Polling Loop Open	50	412	Successful - Download Access	84	573	Burglary Bypass	B8
332	Polling Loop Short	51	413	Unsuccessful Access	85	574	Group Bypass	B9
333	Expansion Module Failure	52	414	System Shutdown	86	575	Swinger Bypass	BA
334	Repeater Failure	53	415	Dialer Shutdown	87	576	Access Zone Shunt	BB
335	Local Printer Paper Out	54	416	Successful Upload	88	577	Access Point Bypass	BC
336	Local Printer Failure	55	<b>ACCESS CONTROL - 420</b>			<b>TEST/MISC. - 600</b>		
337	Exp. Module DC Low	56	421	Access Denied	89	601	Manual Trigger Test	BD
338	Exp. Module Low Batt	57	422	Access Report By User	8A	602	Periodic Test Report	BE
339	Exp. Module Reset	58	423	Forced Access	8B	603	Periodic RF Transmission	BF
341	Exp. Module Tamper	59	424	Egress Denied	8C	604	Fire Test	C0
342	Exp. Module AC Lost	5A	425	Egress Granted	8D	605	Status Report to Follow	C1
343	Exp. Module Self-Test Fail	5B	426	Access Door Propped Open	8E	606	Listen-in to Follow	C2
344	RF Receiver Jam Detected	5C	427	Access Point Door Status Monitor trouble	8F	607	Walk Test Mode	C3
<b>COMMUNICATION TROUBLES - 350 &amp; 360</b>			428	Access Point Request to Exit	90	608	Periodic Test - System Trouble Present	C4
350	Communication	5D	429	Access Program Mode Entry	91	609	Video Xmitter Active	C5
351	Telco Fault 1	5E	430	Access Program Mode Exit	92	611	Point Test Ok	C6
352	Telco Fault 2	5F	431	Access Threat Level Change	93	612	Point Not Tested	C7
353	Long Range Radio	60	432	Access Relay/Trigger Fail	94	613	Intrusion Zone Walk Tested	C8
354	Fail to Communicate	61	433	Access RTE Shunt	95	614	Fire Zone Walk Tested	C9
355	Loss of Radio Supervision	62	434	Access DSM Shunt	96	615	Panic Zone Walk Tested	CA
356	Loss of Central Polling	63	441	Armed Stay	97	616	Service Request	CB
357	Long Range Radio VSWR problem	64	442	Keyswitch Armed Stay	98	621	Event Log Reset	CC
<b>PROTECTION LOOP TROUBLES - 370</b>			<b>SPECIAL TROUBLES - 450 &amp; 460</b>			622	Event Log 50% Full	CD
370	Protection Loop	65	450	Exception Open/Close	99	623	Event Log 90% Full	CE
371	Protection Loop Open	66	451	Early Open/Close	9A	624	Event Log Overflow	CF
372	Protection Loop short	67	452	Late Open/Close	9B	625	Time/Date Reset	D0
373	Fire Trouble	68	453	Failed to Open	9C	626	Time/Date Inaccurate	D1
374	Exit Error Alarm	69	454	Failed to Close	9D	627	Program Mode Entry	D2
375	Panic Zone Trouble	6A	455	Auto-Arm Failed	9E	628	Program Mode Exit	D3
376	Hold-up Zone Trouble	6B	456	Partial Arm	9F	629	32 Hour Event Log Marker	D4
377	Swinger Trouble	6C	457	User Exit Error	A0	630	Schedule Change	D5




## Connections

### Example: Sample Power Requirement Calculations

Power required by devices connected to control panel's auxiliary output must not exceed the auxiliary output's limit:  
 $(A) + (B) + (C) + (D) + (E) + (F) + (G) = 445\text{mA} < 700\text{mA} = \text{OK}$

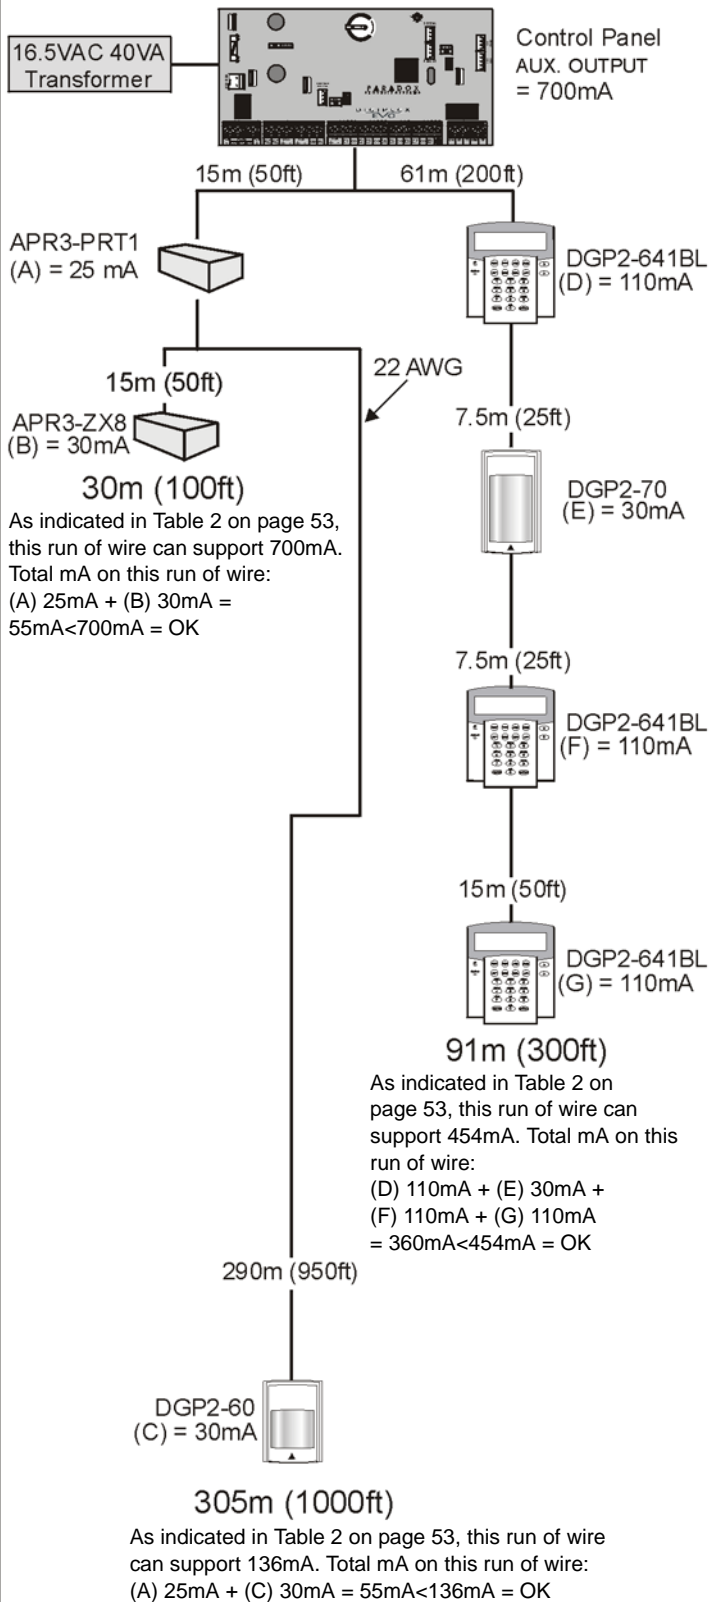


### Keyswitch Connections

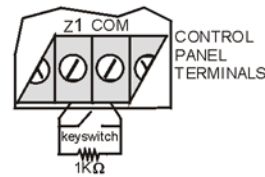

### Fire Zones UL/ULC Installation

Control Panel Terminals

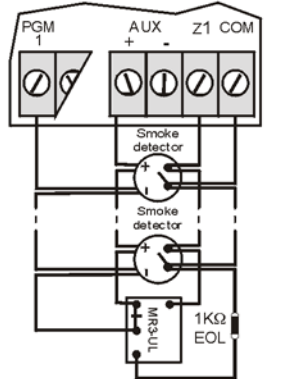


SINGLE FIRE ZONE CONNECTIONS ONLY. If the ATZ feature is enabled, do not use the extra input (i.e. in the above example, input 013 cannot be used as a zone).

Note: It is recommended that the smoke detectors be connected in a daisy chain configuration.

### 2-Wire Smoke Detector Input

Option [1] in section [3030] must be enabled. PGM1 becomes control panel input # 255.

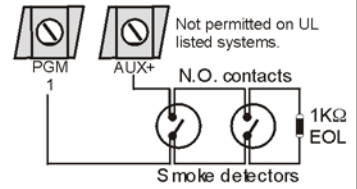


When using ESL smoke detectors with the CleanMe™ feature, do not connect more than 20 detectors in parallel.


Note: It is recommended that the smoke detectors be connected in a daisy chain configuration.

### PGM: Relay Output


CONTROL PANEL TERMINALS

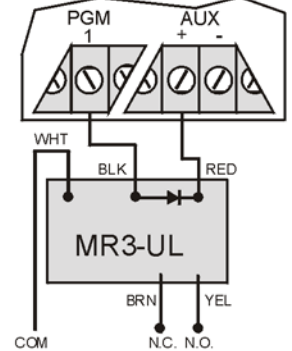

### External Power Supply Connections

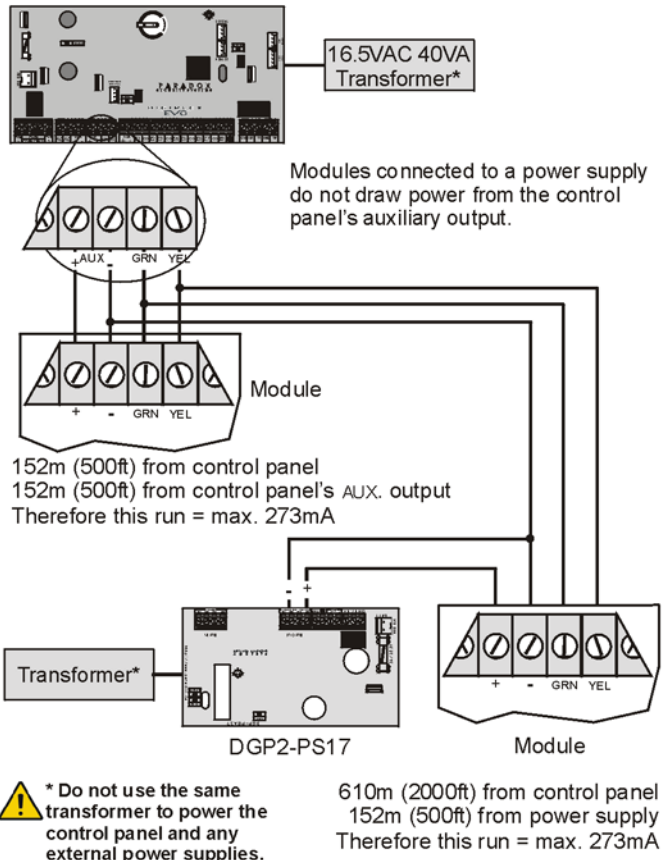

## Telephone Line Connections

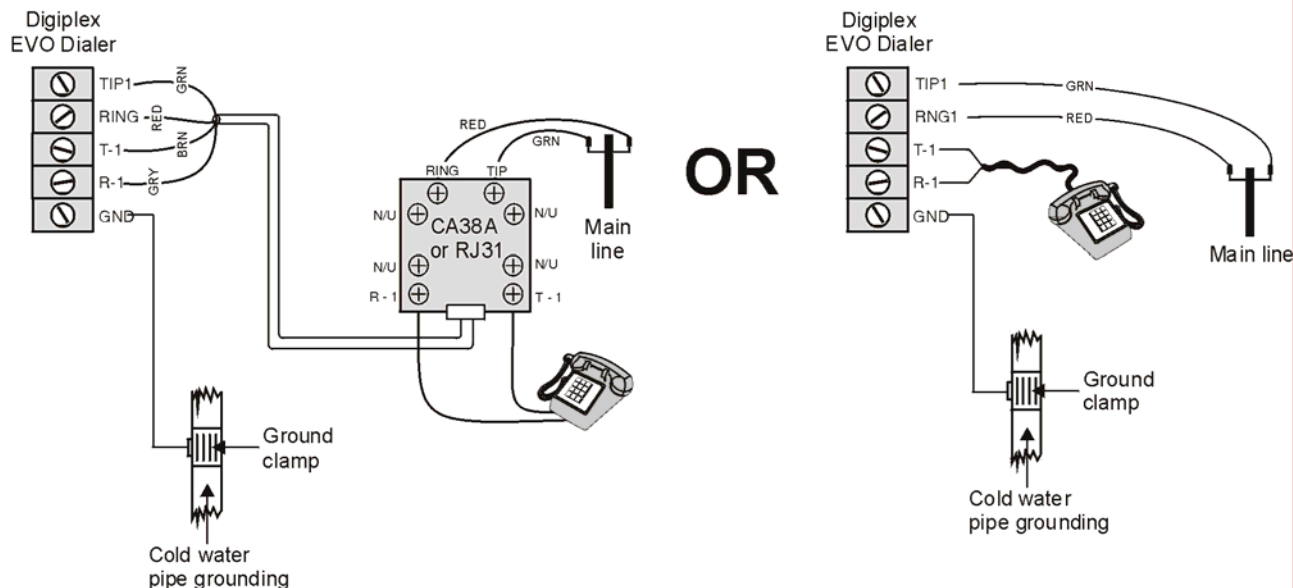

For TBR-21 compliance, please note the following:

- 1) The EVO96 can be connected to the telephone network via an RJ-11 connector.
- 2) The Maximum Dialing Attempts cannot exceed 15 attempts (section [3056] on page 35).

Table 1: Milliamp Consumption Table

Description	QTY.	mA used by each	Total mA
Grafica Graphic LCD Keypads (DNE-K07):	_____	X 130mA =	_____ mA
LCD Keypads (DGP2-641BL):	_____	X 110mA =	_____ mA
LCD Keypads with Built-in Reader (DGP2-641RB):	_____	X 120mA =	_____ mA
Icon LCD Keypads (DGP2-640):	_____	X 95mA =	_____ mA
LED Keypads (DGP2-648BL):	_____	X 110mA =	_____ mA
Motion Detector Modules (DG85W, DGP2-50/60/70):	_____	X 30mA =	_____ mA
Door Contact Modules (DGP2-ZC1):	_____	X 15mA =	_____ mA
1-Zone Expansion Modules (DGP2-ZX1):	_____	X 30mA =	_____ mA
4-Zone Expansion Modules (APR3-ZX4):	_____	X 30mA =	_____ mA
8-Zone Expansion Modules (APR3-ZX8):	_____	X 30mA =	_____ mA
Magellan Wireless Expansion Modules (MG-RCV3):	_____	X 35mA =	_____ mA
4-PGM Expansion Modules (APR3-PGM4):	_____	X 150mA =	_____ mA
Printer Modules (APR3-PRT1):	_____	X 25mA =	_____ mA
DVACS Modules (DGP2-DVAC):	_____	X 40mA =	_____ mA
Annunciator Modules (DGP2-ANC1B):	_____	X 20mA =	_____ mA
InTouch Voice-Assisted Arm/Disarm Modules (APR3-ADM2):	_____	X 105mA =	_____ mA
Hub and Bus Isolator (APR3-HUB2):	_____	X 50mA =	_____ mA
Access Control Module (DGP-ACM11):	_____	X 120mA =	_____ mA
<b>Note:</b> The DGP-ACM11 consumes 130mA from its own power supply or 120mA when connected on the bus for power.			
Other devices such as hardwired motion detectors			_____ mA
Maximum available milliamps = <b>700mA</b>		GRAND TOTAL	_____ mA

**STEP 1:** Using Table 1, calculate the total number of milliamps (mA) required by each device, module, and accessory in the system. Please take into account devices connected to the control panel's PGM outputs. Since the BELL output has its own power supply, do not include the sirens connected to it in the calculation.

**STEP 2:** If the Grand Total is less than 700mA, go to step 3. If the value is greater, you will require an external power supply (see *External Power Supply Connections* drawing on page 51) to provide the additional power needed. Proceed with step 3 and refer to the example (*Sample Power Requirement Calculations* drawing) on page 51.

**STEP 3:** Due to the degradation of a power signal over long distances (if this were the case, we recommend connecting a Paradox Power Supply Module, DGP2-PS17), **EACH** length or run of wire in the system can support only a specific number of milliamps (mA). Using Table 2, determine how many milliamps each length of wire can support. Please note that the total number of milliamps (mA) can never surpass 700mA.

Table 2: Milliamp (mA) Limitations For Each Run of Wire

Gauge: 18AWG, Surface: 0.823mm <sup>2</sup>		Gauge: 22AWG, Surface: 0.326mm <sup>2</sup>		Gauge: 24AWG, Surface: 0.205mm <sup>2</sup>	
Length of each run of wire	Available Milliamps (mA)	Length of each run of wire	Available Milliamps (mA)	Length of each run of wire	Available Milliamps (mA)
30m(100ft.)	700	30m(100ft.)	700	30m(100ft.)	700
61m(200ft.)	700	61m(200ft.)	682	61m(200ft.)	429
91m(300ft.)	700	91m(300ft.)	454	91m(300ft.)	286
122m(400ft.)	700	122m(400ft.)	341	122m(400ft.)	214
152m(500ft.)	690	152m(500ft.)	273	152m(500ft.)	171
183m(600ft.)	575	183m(600ft.)	227	183m(600ft.)	143
213m(700ft.)	493	213m(700ft.)	195		
244m(800ft.)	431	244m(800ft.)	170		
274m(900ft.)	383	274m(900ft.)	151		
305m(1000ft.)	345	305m(1000ft.)	136		
457m(1500ft.)	230				
610m(2000ft.)	172				
762m(2500ft.)	138				
914m(3000ft.)	115				

## Connecting the Combustion in Noisy Environments


When installing the combustion wires in proximity to high electrical interference such as neon lights, motors, high-voltage wiring, transformers, or if connecting the combustion across separate buildings, you must use shielded cables. Connect the shielded cable as detailed below:

**Within the Same Building:** Strip the outer jacket at one end of the shielded cable to expose the shield and connect the shield to the control panel ground (not the dialer ground), while leaving the shield at the other end of the cable open (floating).

**Across Separate Buildings:** Strip the outer jacket at one end of the shielded cable to expose the shield. In the same building that houses the control panel, connect the exposed shield to a cold water pipe or any other earth ground available, while leaving the shield at the other end of the cable open (floating). The same configuration applies to any subsequent building.

## Built-in RTC

Digiplex EVO incorporates an RTC directly on the PC board. The RTC will save the control panel's internal clock when both the AC and battery power have been lost. After power is lost and then restored, the control panel will verify with and then retrieve the time from the RTC. The control panel will verify and compare its time with the time stored in the RTC every hour. If the times are different, the control panel will reset its internal clock to the time saved in the RTC. The RTC uses a 3V lithium battery (CR2032) with a battery life of 11 years. Change the battery as shown below:

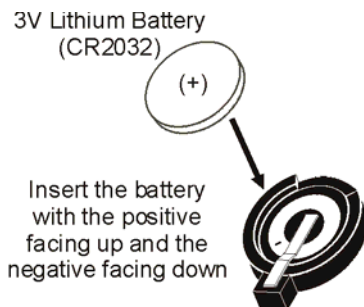

**Reprogram the control panel's clock after changing the battery.**



**Danger of explosion exists if the lithium battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.**



**Do not connect a DGP2-TM1 Time Module to the "mem key" connector. Connecting a DGP2-TM1 will create time errors within the panel and features that use the control panel's internal clock (ex.: Auto-arming) will not function correctly.**

# DGP2-641BL/RB Programming



DGP2-641BL V1.1  
DGP2-641RB V2.0

The keypad's serial number can be found on the keypad's PC board. The keypad's serial number can also be viewed by pressing and holding the **[0]** key, entering the **[INSTALLER CODE]** and then entering section **[000]**.

△ = Default setting

## SECTION [001] : Keypad Partition Assignment

Option	OFF	ON
[1] Partition 1	1 Disabled	△ Enabled
[2] Partition 2	1 Disabled	△ Enabled
[3] Partition 3	1 Disabled	△ Enabled
[4] Partition 4	1 Disabled	△ Enabled
[5] Partition 5	1 Disabled	△ Enabled
[6] Partition 6	1 Disabled	△ Enabled
[7] Partition 7	1 Disabled	△ Enabled
[8] Partition 8	1 Disabled	△ Enabled

## SECTION [002]: Assigning Doors to Partitions †

Option	OFF	ON
[1] Door Assigned to Partition 1	1 Disabled	△ Enabled
[2] Door Assigned to Partition 2	△ Disabled	1 Enabled
[3] Door Assigned to Partition 3	△ Disabled	1 Enabled
[4] Door Assigned to Partition 4	△ Disabled	1 Enabled
[5] Door Assigned to Partition 5	△ Disabled	1 Enabled
[6] Door Assigned to Partition 6	△ Disabled	1 Enabled
[7] Door Assigned to Partition 7	△ Disabled	1 Enabled
[8] Door Assigned to Partition 8	△ Disabled	1 Enabled

## SECTION [003]: General Options 1

Option	OFF	ON
[1] Display code entry	△ Disabled	1 Enabled
[2] Display exit delay	△ Disabled	1 Enabled
[3] Display entry delay	△ Disabled	1 Enabled
[4] Confidential Mode (not for UL installations)	△ Disabled	1 Enabled
[5] To exit Confidential Mode	△ Enter code	1 Press Button
[6] Future Use	1 N/A	1 N/A
[7] Future Use	1 N/A	1 N/A
[8] Time display option	△ yy/mm/dd	1 dd/mm/yy

## SECTION [004]: General Options 2

Option	OFF	ON
[1] Muting	△ Disabled	1 Enabled
[2] Exit Delay Beep	1 Disabled	△ Enabled
[3] Door Left Open Pre-Alarm †	1 Disabled	△ Enabled
[4] Chime on Zone Closure	△ Disabled	1 Enabled
[5] Door Left Open Alarm Feedback †	1 Silent	△ Audible
[6] Door Left Open Alarm Follows †	△ Alarm restore	1 Beep Timer
[7] Door Forced Alarm †	1 Silent	△ Audible
[8] Door Forced Alarm †	△ Alarm restore	1 Beep Timer

## SECTION [005] : Beep on Trouble

Option	OFF	ON
[1] System & Clock Trouble Beep	△ Disabled	1 Enabled
[2] Communicator Trouble Beep	△ Disabled	1 Enabled
[3] Module & Combus Trouble Beep	△ Disabled	1 Enabled
[4] All Zone Trouble Beep	△ Disabled	1 Enabled
[5] to [6] Future Use	1 N/A	1 N/A
[7] Time Format	△ 24Hr clock	1 12Hr clock
[8] Future Use	1 N/A	1 N/A

## SECTION [006]: PGM and Tamper Options

Option	OFF	ON
[1] PGM State‡	△ N.O.	1 N.C.
[2] PGM Deactivation Mode‡	△ Deactivation Event	1 PGM Timer
[3] PGM Base Time‡	△ 1 second	1 1 minute
[4] PGM Override‡	△ Disabled	1 Enabled
[5] Keypad Tamper	△ Disabled	1 Enabled
[6] to [8] Future Use	1 N/A	1 N/A

† Section/option is only available with DGP2-641RB

‡ Section/option is only available with DGP2-641BL

## SECTION [006]: General Options 3 (DGP2-641RB only)

Option		OFF	ON
[1]	Card Activates Door Unlocked Schedule	1 Disabled.	△ Enabled
[2]	Door Left Open Alarm	△ Disabled	1 Enabled
[3]	Door Forced Open Alarm	△ Disabled	1 Enabled
[4]	PIN Entry on Keypad (Always Off)	△ Enabled	
[5]	Keypad Tamper	△ Disabled	1 Enabled
[6]	Relock Door	△ Disabled	1 Enabled
[7]	Future Use	1 N/A	1 N/A
[8]	Unlock on REX	△ Disabled	1 Enabled

Section	Data	Description	Default
[007]	__/_/__(005 to 255 seconds)	Confidential Mode Timer	120
[008]	__/_/__(000 to 255; see option [3] in section [006])	PGM Timer ‡	005
[008]	__/_/__(000 to 255 seconds)	Door Unlocked Period †	005
[009]	__/_/__(000 to 255 seconds added to section [008])	Door Unlocked Period Extension †	015
[010]	__/_/__(000 to 255 seconds)	Door Left Open Interval †	060
[011]	__/_/__(000 to 25 seconds)	Door Left Open Pre-Alarm Timer †	015
[012]	__/_/__(000 to 25 seconds)	Beep Timer for Door Left Open Alarm †	005
[013]	__/_/__(000 to 25 seconds)	Beep Timer for Door Forced Open Alarm †	005

† Section/option is only available with DGP2-641RB.

‡ Section/option is only available with DGP2-641BL.

## Section [017] Door Unlocked Schedule (DGP2-641RB only)

	Start Time	End Time	Days (turn ON or OFF)
			S M T W T F S H
Schedule A:	____ : ____	____ : ____	1 2 3 4 5 6 7 8
Schedule B:	____ : ____	____ : ____	1 2 3 4 5 6 7 8

	Event Group	Feature Group	Start #	End #
	Section	Section	Section	Section
PGM Activation	[009]‡ __/_/__	[010]‡ __/_/__	[011]‡ __/_/__	[012]‡ __/_/__
PGM Deactivation	[013]‡ __/_/__	[014]‡ __/_/__	[015]‡ __/_/__	[016]‡ __/_/__

‡ Section/option is only available with DGP2-641BL.



Only Event Groups 000 to 055 and 070 can be used to program the module's PGM. See "Programmable Outputs" on page 17.

## Message Programming

Each section from [101] to [148], [200] to [204] and [301] to [396] contains one message with a maximum of 16 characters. The sections contain the following messages:

Sections [101] to [148] = "Zone 01" to "Zone 48" respectively

Section [200] = "Paradox Security"

Sections [201] to [204] = "First Area", "Second Area", "Third Area", and "Fourth Area"

Sections [301] to [396] = "Code 01" to "Code 96" respectively

After entering the section corresponding to the desired message, the message can be re-programmed to suit your installation needs as detailed in Table 1. For example, section [101] "Zone 01" can be changed to "FRONT DOOR".



Table 1: Message Programming Special Function Keys

Key	Function	Details
[STAY]	Insert Space	Press the [STAY] key to insert a blank space at the current cursor's position.
[FORCE]	Delete	Press the [FORCE] key to delete the character or blank space found at the current cursor's position.
[ARM]	Delete Until the End	Press the [ARM] key to delete all characters and spaces to the right of the cursor and at the cursor's position.
[DISARM]	Numeric/Alphanumeric	Press the [DISARM] key to toggle the numeric keys to alphanumeric keys and vice versa. Numeric: Keys [0] to [9] represent numbers 0 to 9. Alphanumeric: refer to Table 2 below.
[BYP]	Lower/Upper Case	Press the [BYP] key to toggle from lower to upper case and vice versa.
[MEM]	Special Characters	After pressing the [MEM] key, the cursor will turn into a flashing black square. Using Table 3 below, enter the 3-digit number for the desired character.

Table 2: Alphanumeric Keys

Key	Press Key Once	Press Key Twice	Press Key Three Times
[1]	A	B	C
[2]	D	E	F
[3]	G	H	I
[4]	J	K	L
[5]	M	N	O
[6]	P	Q	R
[7]	S	T	U
[8]	V	W	X
[9]	Y	Z	

Table 3: Special Characters

032	048	064	080	096	112	128	144	160	176	192	208
	0	@	P	`	p	Û	Ê	ä	§	Ø	•
033	049	065	081	097	113	129	145	161	177	193	209
!	1	A	Q	a	q	Ü	È	Î	±	Ł	„
034	050	066	082	098	114	130	146	162	178	194	210
"	2	B	R	b	r	Ú	É	Ì	íj	Đ	°
035	051	067	083	099	115	131	147	163	179	195	211
#	3	C	S	c	s	Ů	Ě	Í	↑	ß	`
036	052	068	084	100	116	132	148	164	180	196	212
\$	4	D	T	d	t	û	ê	ï	↓	ç	'
037	053	069	085	101	117	133	149	165	181	197	213
%	5	E	U	e	u	ù	è	ì	↵	®	~
038	054	070	086	102	118	134	150	166	182	198	214
&	6	F	V	f	v	ú	é	ñ	f	¤	÷
039	055	071	087	103	119	135	151	167	183	199	215
'	7	G	W	g	w	Ô	ë	ñ	£	⌈⌋	«
040	056	072	088	104	120	136	152	168	184	200	216
(	8	H	X	h	x	Ò	À	Ñ	→	μ	»
041	057	073	089	105	121	137	153	169	185	201	217
)	9	I	Y	i	y	Ó	Ä	Ö	↴	Ø	!.
042	058	074	090	106	122	138	154	170	186	202	218
*	:	J	Z	j	z	Ö	å	g	↑	ÿ	\
043	059	075	091	107	123	139	155	171	187	203	219
+	;	K	[	k	{	ô	â	v	↵	Ã	x
044	060	076	092	108	124	140	156	172	188	204	220
,	<	L	¥	l		ò	à	ü	¶	¢	©
045	061	077	093	109	125	141	157	173	189	205	221
-	=	M	]	m	}	ó	á	w	½	ã	©
046	062	078	094	110	126	142	158	174	190	206	222
.	>	N	^	n	→	õ	ä	ü	⅓	Ö	¶
047	063	079	095	111	127	143	159	175	191	207	223
/	?	O	_	o	←	ç	Ä	Æ	¼	ö	≡




## Using the Memory Key

- [510]** Download all from the Memory Key (LCD keypad sections **[001]** to **[396]** and all labels and messages) to the LCD keypad.
- [520]** Copy the LCD keypad sections **[001]** to **[396]** and all labels and messages to the Memory Key.


### Download Contents of the Memory Key to the LCD Keypad

- 1) Insert the Memory Key onto the keypad's connector labelled "KEY".
- 2) To download the contents of the Memory Key, enter the keypad's programming mode and enter section **[510]**.
- 3) Once the keypad emits a confirmation beep, wait for a second confirmation beep and then remove the Memory Key.

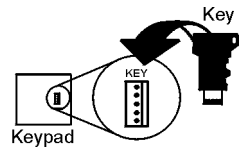


### Copy Contents of the LCD Keypad to the Memory Key

- 1) Insert Memory Key onto the keypad's connector labelled "KEY". Ensure that the write protect jumper is on (refer to *Memory Key (PMC-4)* below).
- 2) To copy the contents to the Memory Key, enter the keypad's programming mode and enter section **[520]**.
- 3) Once the keypad emits a confirmation beep, wait for a second confirmation beep and then remove the Memory Key. Remove the Memory Key's jumper if you do not wish to accidentally overwrite its contents.

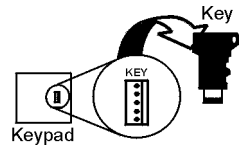

## Memory Key (PMC-4)

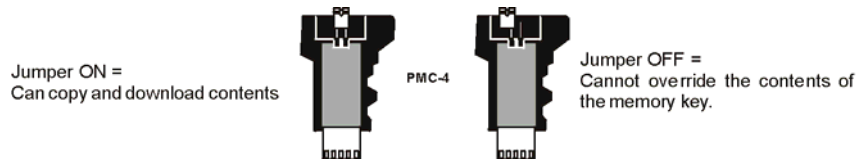


**The memory key will only function with a keypad that has the DGP2 or DNE prefix in the model number. Only the PMC-4 memory key will function with DGP2 and DNE keypads.**

## Combust Voltmeter

To verify if the combus is supplying sufficient power, press and hold the [0] key, enter the [INSTALLER CODE] and press the [ACC] button. A reading of 10.5V or lower indicates that the voltage is too low. The voltage may drop during the control panel battery test.

## PCB Layout

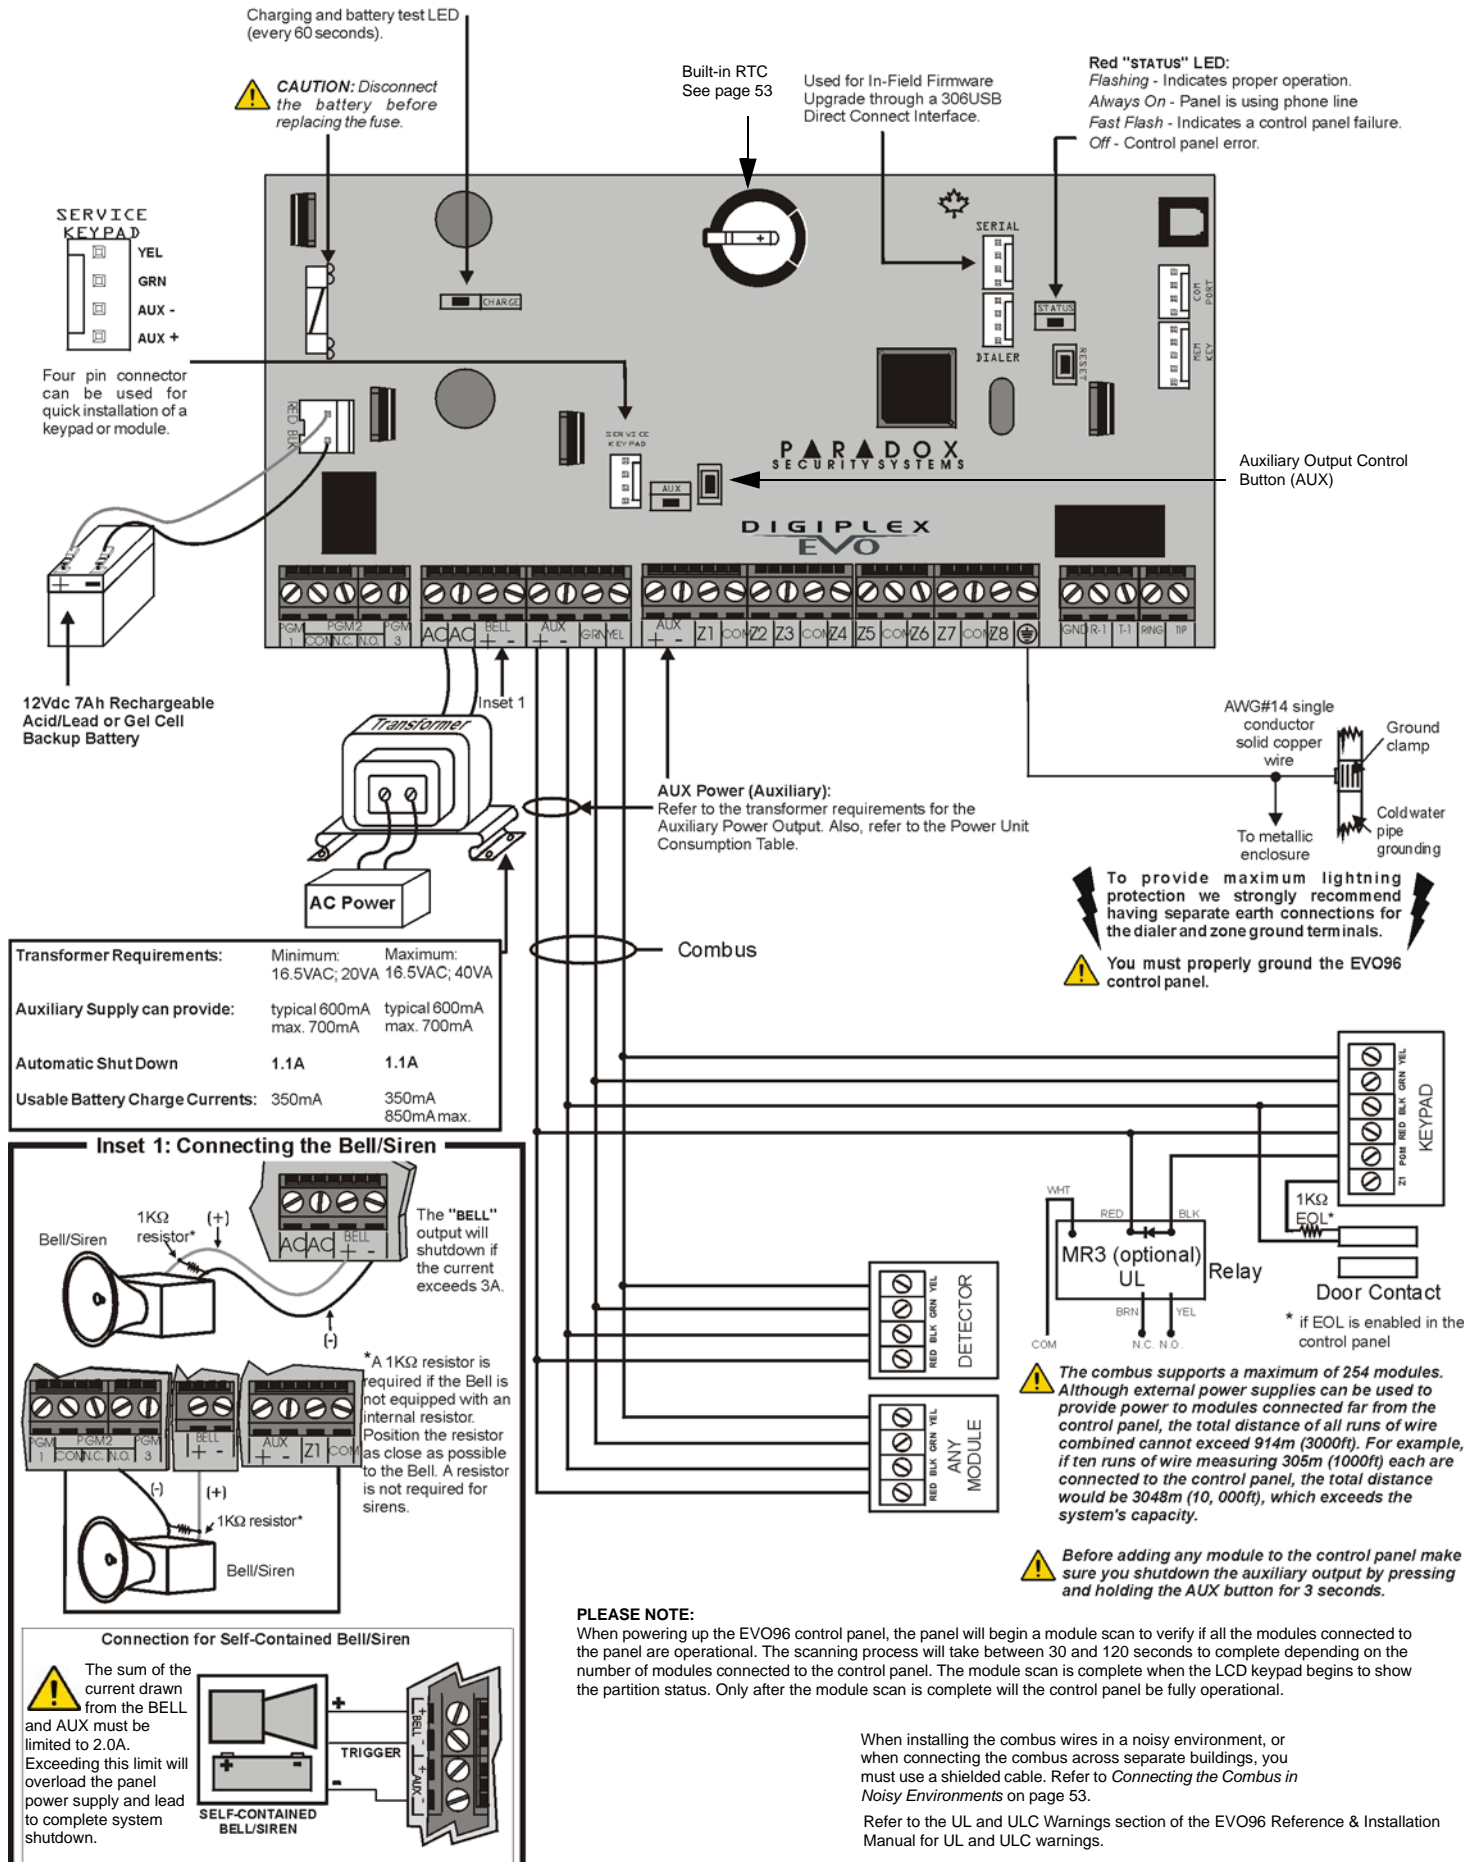

**Warranty**

Paradox Security Systems Ltd. ("Seller") warrants its products to be free from defects in materials and workmanship under normal use for a period of one year. Except as specifically stated herein, all express or implied warranties whatsoever, statutory or otherwise, including without limitation, any implied warranty of merchantability and fitness for a particular purpose, are expressly excluded. Because Seller does not install or connect the products and because the products may be used in conjunction with products not manufactured by Seller, Seller cannot guarantee the performance of the security system and shall not be responsible for circumstances resulting from the product's inability to operate. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. Returns must include proof of purchase and be within the warranty period. In no event shall the Seller be liable to the buyer or any other person for any loss or damages whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits stolen goods, or claims by any other party, caused by defective goods or otherwise arising from the improper, incorrect or otherwise faulty installation or use of the merchandise sold.

Notwithstanding the preceding paragraph, the Seller's maximum liability will be strictly limited to the purchase price of the defective product. Your use of this product signifies your acceptance of this warranty.

BEWARE: Dealers, installers and/or others selling the product are not authorized to modify this warranty or make additional warranties that are binding on the Seller.

© 2002-2006 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 6215399, 6111256, 5751803, 5721542, 5287111, 5119069, 5077549, 5920259 and 5886632. Canadian and international patents may also apply.

Digiplex, Magellan, PosiPIN and WinLoad are trademarks or registered trademarks of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries

# Trouble Display

## To view the Trouble Display on LCD or LED keypads:

- 1) Press the [TRBL] key.
- 2) **For LEDs:** Press the Numerical Symbol corresponding to the Group heading to view the specific trouble.  
**For LCDs:** Press the number representing the trouble and use the [▲] and [▼] keys to view the specific trouble.

## To view the Trouble Display on Grafica Keypads:

- 1) Enter your [ACCESS CODE].
- 2) Using the scroll keys, highlight **Trouble** and then press the center action key (**Ok**). The trouble(s) will appear by Trouble Group.
- 3) If more than one Trouble Group appears, highlight the desired group before pressing the center action key (**View**) to view the specific trouble.

TROUBLE GROUP [1]: SYSTEM			TROUBLE GROUP [2]: COMMUNICATOR	
[1] AC Failure	[4] Bell Current Limit	[7] RAM Check Error	[1] TLM1	[4] Fail to Com. 3
[2] Battery Trouble	[5] Bell Absent		[2] Fail to Com. 1	[5] Fail to Com. 4
[3] Aux. Current Limit	[6] ROM Check Error		[3] Fail to Com. 2	[6] Fail to Com. PC
TROUBLE GROUP [3]: MODULE TROUBLE			TROUBLE GROUP [4]: NETWORK (COMBUS) TROUBLES	
[1] Module Tamper	[5] Printer Trouble		[1] Missing Keypad	[6] General Failure
[2] Module ROM Check Error	[6] Module AC Failure		[2] Missing Module	[7] Combus Overload
[3] Module TLM Trouble	[7] Module Battery Failure			
[4] Module Fail to Com.	[8] Module Supply Output			
TROUBLE GROUP [5]: ZONE TAMPER			TROUBLE GROUP [6]: ZONE LOW BATTERY	
Press the [5] button to display the tampered zone or zones.			Press the [6] button to display the zone(s) assigned to wireless devices with low batteries.	
TROUBLE GROUP [7]: ZONE FAULT			TROUBLE GROUP [8]: CLOCK LOSS	
Press the [7] button to display the zone(s) experiencing a communication, a fire loop or CleanMe™ trouble.			Press the [8] button to re-program the time.	

For technical support in Canada or the U.S., call 1-800-791-1919 for English or 1-866-912-0600 for French, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST.  
For technical support outside Canada and the U.S., call 00-1-450-491-7444, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST.  
Please feel free to visit our website at [paradox.com](http://paradox.com).

**P**  **R**  **D O X**<sup>®</sup>  
**S E C U R I T Y   S Y S T E M S**  
780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA  
Tel.: 450 491-7444 Fax: 450 491-2313

[paradox.com](http://paradox.com)

PRINTED IN CANADA - 05/2006

EVO96-EP01

